

Setting Guide

Thank you for purchasing the "MARVERA" (simply called the "product" or "main unit" from here on). In this guide, settings and precautions for using the product are described. For explanations of basic functions, refer to "Basic Manual".

Company names and product names referred to in this manual are trademarks or registered trademarks of respective companies. The TM, ® marks may be omitted in this manual. Illustrations and screens shown in this manual may look different from the actual product and screens. In some cases, minor details or a part of a screen may be omitted. In this manual, "au Nano IC Card 04 LE" is abbreviated as "au IC card". In this manual, "microSD™" memory card (commercially available) and "microSDHC™" memory card (commercially available) are abbreviated as "microSD memory card" or "microSD".

Sold by: KDDI CORPORATION, OKINAWA CELLULAR TELEPHONE COMPANY
 Manufactured by: KYOCERA Corporation
 August 2017, 1st Edition

- **When Using the Product**
Describes things to note when using the product.
- **Basic Operation**
Describes basic key operations.
- **Using the Pointer**
Describes pointer operations.
- **Preparing the Product for Use**
Describes initial preparations.
- **Initial Settings**
Set an au ID, etc. to use various services provided by au.
- **Switching to English Display**
You can switch the display from Japanese to English.
- **Setting Wi-Fi®**
Describes how to connect to a Wi-Fi® network.
- **Checking On-Screen Status**
Check the signal reception strength, battery level, etc. on-screen.
- **E-mail**
Make initial settings for E-mail (@ezweb.ne.jp), etc.
- **How to Transfer Data**
You can return/save data from your old au phone to the product using a microSD memory card or au server.
- **Increasing the Lighting Time of the Screen**
You can set the time before the screen automatically turns off.
- **Adjusting the Brightness of the Screen**
You can adjust the brightness level of the screen.
- **Using Battery Care Mode**
You can extend the battery life using battery care mode.
- **Changing Font Size (Character Size)**
Change the font size.
- **Changing Volume**
Set the volume of ringtones, alarms, etc.
- **Attaching a Strap**
Describes how to attach a strap.

When Using the Product

- Note the following when using the product.
- When you purchase the product, the battery is not fully charged. Be sure to charge the battery before use.
 - To maintain water and dust resistance, attach the back cover firmly.
 - If a confirmation screen of conditions, etc. is displayed during the procedure for applications or functions of the product, follow the on-screen instructions.
 - If a confirmation screen of communication charges is displayed when the application or function is activated, follow the on-screen instructions.

Basic Operation

Basic key operations are described here. For detailed operation, refer to "Basic Manual".

Key Names and Functions

Names of keys on the product and their functions are described.

① Center key	⑨ Camera key
② Phone book key	⑩ Browser key
③ Mail key	Displays browser menu.
④ CLR/Memo key	While using the product, end call or return to the previous screen.
⑤ Call/Pair key	⑪ Power/End call key
⑥ [0] - [9], [X], [#]	While using the product, end call or exit functions. Hold down to turn the power on or off.
Number keys	⑫ Touch area (Touch pointer)
⑦ [F1] - [F3] Custom keys 1 - 3	⑬ マナー/シャッター Manner/Shutter key
⑧ Cursor key	
Left key/Incoming history	
Right key/Outgoing history	
Up key	
Down key	

Using the Pointer

Move the pointer on the screen up/down/left/right to operate the browser, etc. The product supports two types of pointer operations, "Touch pointer" mode that is a touchpad-like operation to touch the touch area with your fingers, and "Navigation keys" mode that is a pointer operation by pressing [Up/Down/Left/Right]. It is set to the navigation keys mode at the time of purchase when you set the pointer to ON.

1. **Activate a pointer-capable function/application**
"OFF" (OFF) / "ON" (ON) is displayed in the status bar, and "P" (pointer) is displayed when the pointer is on.
- Hold down [F3] for at least 1 second to toggle the pointer ON/OFF.
- Key operation is still possible when the pointer is ON (except some applications).
- To change the pointer mode, from the standby screen, press [Home] → [Settings] → [More settings] → [Pointer] → [Mode] → [Touch]/[Navigation keys].

Touch Pointer Operation

Tap/Double-tap
Lightly touch the touch area and then immediately release your finger. Tapping the touch area twice consecutively in the same position is called double-tap.
 • Move "P" to a desired item and tap, and then the item is confirmed (okayed).

Slide
While lightly touching a touch area, slide in a desired direction or to a desired position. The arrow moves in the direction you slide it.
 • Long-touch the touch area to change "P" to "P+>". and slide to scroll the screen.
 • With the pointer at the edge of the screen, slide toward off the screen to scroll. Or slide two fingers on the screen to scroll in the direction of the slide.

Zoom-in/Zoom-out
While touching the touch area with two fingers, spread them apart (zoom-in) or pinch the fingers together (zoom-out).

Long-touch
Lightly touch the touch area and then keep touching it.
 • Long-touch the touch area to change "P" to "P+>". Long-touch it again to return to "P".

Flick
Touch on the touch area and flick up/down/left/right. The arrow moves in the direction you flick it.
 • Long-touch the touch area to change "P" to "P+>". and flick to scroll the screen.
 • With the pointer at the edge of the screen, flick toward off the screen to scroll. Or flick two fingers on the screen to scroll in the direction of the flick.

Pointer Operation

Move
By pressing [Up/Down/Left/Right], and you can move the pointer up/down/left/right.

Select
With the pointer at buttons or items to select, the buttons or items are confirmed (okayed) by pressing [Enter].

Scroll
With the pointer at the up/down/left/right edge of the screen, move toward off the screen using [Up/Down/Left/Right].
 • By long-pressing [Enter] for more 2 seconds, the pointer changes to "P+>". and you can scroll the screen using [Up/Down/Left/Right].

Preparing the Product for Use

- Always turn the power off before installing or removing the battery pack, au IC card, or a microSD memory card.
- Attach the battery pack after checking that the au IC card and microSD memory card are firmly in place.
- To maintain water resistance, firmly close the back cover without leaving any gaps.
- Attaching items improperly may result in damage to the battery pack or back cover.

Installing/Removing the Battery Pack

Installing

1. **Remove the back cover of the back of the product**
Lift the back cover by the notch using fingertips (fingernail, etc.) in the direction shown to remove.
2. **Install the battery pack**
Confirm the position of connection, and then slide battery pack in and press firmly into place.
3. **Attach the back cover**
Note the orientation of the back cover and place it on the product with the product closed, and attach the back cover.
4. **Press firmly to make sure there are no gaps around the back cover**
Trace the circumference of the back cover in direction ① with finger and press in direction ② to install the back cover completely.

Removing

1. **Remove the back cover of the back of the product**
Lift the back cover by the notch using fingertips (fingernail, etc.) in the direction shown to remove.
2. **Remove the battery pack**
Lift the battery pack by the notch of the product using fingertips (fingernail, etc.) in the direction shown to remove.

Installing/Removing the au IC Card

The au IC card contains customer phone number and other information. The product is compatible with au Nano IC Card 04 LE.

- When handling the au IC card, observe the following to avoid malfunction and damage.
 - Do not touch the IC (metal) part on the au IC card or the IC card terminals on the product.
 - Confirm the correct orientation for installing.
 - Do not forcefully install or remove.
- An error message is displayed if the au IC card is not installed correctly or if it has an abnormality.
- Be careful not to lose the removed au IC card.
- Do not insert the au IC card with a conversion adapter. May cause malfunction.

- Turn the power off beforehand and remove the battery pack.
 - If the au IC card is not inserted, the following operations are unavailable. "P" is also displayed.
 - Making/Receiving a call
 - Sending/Receiving SMS
 - Making initial settings for E-mail (@ezweb.ne.jp) and sending/receiving e-mail
 - Making PIN code settings
 - Checking product phone number and e-mail address
- Besides the above, functions which require your phone number, etc. may not be available.
 * Emergency calls also cannot be made to 110 (police), 119 (fire department), or 118 (coast guard). However, calls can be made if signal strength during GSM/UMTS/LTE roaming is any level other than "Out of service area" (emergency numbers depend on the country; calls may not go through).
- Restricting product use with a PIN code
Your au IC card contains valuable personal information. To protect this information, you can change the PIN code and lock the SIM card to restrict use by other persons.

Installing

1. **Turn the power off and remove the battery pack**
• See "Installing/Removing the Battery Pack" for how to remove the back cover and battery pack.
• Reverse the direction of the product after step 2.
2. **Slide the au IC card slot cover with the pad of your finger in direction ① and then raise in direction ②**
Be careful not to touch the metal terminals on the product when raising the cover. Do not slide the cover forcefully (may damage the cover or injure hand/finger).
3. **Slide the au IC card in the direction shown in the slot cover**
Note the position of the card's notch and orientation of IC (metal) surface.
4. **Lower the au IC card slot cover in direction ①, and then slide in direction ② with the pad of your finger until it clicks locked**
If the cover is difficult to close, raise the cover again and make sure the au IC card is installed all the way.

Removing

1. **Turn the power off and remove the battery pack**
• See "Installing/Removing the Battery Pack" for how to remove the back cover and battery pack.
• Reverse the direction of the product after step 2.
2. **Slide the au IC card slot cover with the pad of your finger in direction ① and then raise in direction ②**
Be careful not to touch the metal terminals on the product when raising the cover. Do not slide the cover forcefully (may damage the cover or injure hand/finger).
3. **Slide the au IC card in the direction shown to remove**
4. **Lower the au IC card slot cover in direction ①, and then slide in direction ② with the pad of your finger until it clicks locked**

Installing/Removing the microSD Memory Card

You can save/move/copy data by installing a microSD memory card (including microSDHC memory card) in the product.

- A protective card is preinstalled. If not using a microSD memory card, leave the protective card installed in the product to prevent parts from rattling. Be careful not to lose the removed protective card.
* The protective card can be used when a microSD memory card is uninstalled. Not installing the protective card does not adversely affect the product.
- Turn the power off beforehand and remove the battery pack.
- A microSD memory card initialized on another device may not work on the product properly. Format the microSD memory card on this product. Use the following steps.
From the standby screen, press [Home] → [Settings] → [More settings] → [Storage] → [Erase SD card] → [Erase SD card] → [Erase everything]
- Make sure that the top/bottom and front/rear of the microSD memory card are facing correctly. Trying to force a wrongly oriented card into the slot could make it impossible to remove the card or result in damage.
- Do not touch the terminal part of a microSD memory card.

Installing

1. **Turn the power off and remove the battery pack**
• See "Installing/Removing the Battery Pack" for how to remove the back cover and battery pack.
2. **Slide the microSD memory card slot cover with the pad of your finger in direction ① and then raise in direction ②**
Be careful not to touch the metal terminals on the product when raising the cover. Do not slide the cover forcefully (may damage the cover or injure hand/finger).
3. **Slide the microSD memory card in the direction shown in the slot cover**
Note the orientation of the microSD memory card. Remove the protective card if it is installed.
4. **Lower the microSD memory card slot cover in direction ①, and then slide in direction ② with the pad of your finger until it clicks locked**
If the cover is difficult to close, raise the cover again and make sure the microSD memory card is installed all the way.

Removing

 
1. **Turn the power off and remove the battery pack**
• See "Installing/Removing the Battery Pack" for how to remove the back cover and battery pack.
2. **Slide the microSD memory card slot cover with the pad of your finger in direction ① and then raise in direction ②**
Be careful not to touch the metal terminals on the product when raising the cover. Do not slide the cover forcefully (may damage the cover or injure hand/finger).
3. **Slide the microSD memory card in the direction shown to remove**
If not using a microSD memory card, attach the protective card.
4. **Lower the microSD memory card slot cover in direction ①, and then slide in direction ② with the pad of your finger until it clicks locked**

Charging

 
- While charging, the charging/notification indicator illuminates in red. When charging is finished, the charging/notification indicator goes out.
- The product may become warm while charging, depending on the situation, but this is not abnormal.
- When you operate the product with the specified charger (sold separately) connected, the product may repeat short-time charging/discharging resulting in short battery life.
- When the temperature of the environment or product becomes extremely high or low, charging may be stopped. Try to charge the battery at room temperature as much as possible.
- If the charging/notification indicator blinks in red, check if the phone is connected correctly, etc. Even if the indicator keeps blinking, stop charging and then contact an au shop or Repair and Delivery Support Center.

Charging with a Specified AC Adapter (Sold Separately)

- 1 Check the orientation of the microUSB plug of Common AC Adapter 05 (sold separately) and insert it straight into the external connection terminal

 
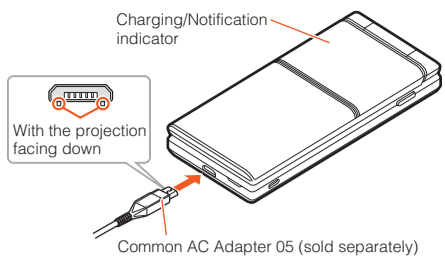 


- 2 Insert the power plug of Common AC Adapter 05 (sold separately) into an outlet (100 VAC to 240 VAC)

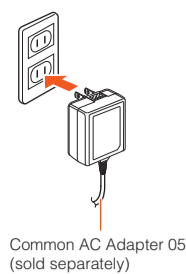 


Charging with a Desktop Holder (KYF35PUA) (Sold Separately) and a Specified AC Adapter (Sold Separately)

- 1 Insert the microUSB plug of Common AC Adapter 05 (sold separately) to the connection jack of the desktop holder (KYF35PUA) (sold separately)
- 2 Insert the power plug of Common AC Adapter 05 (sold separately) into an outlet (100 VAC to 240 VAC)

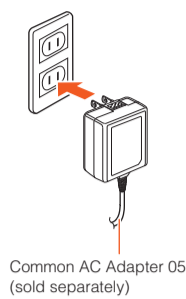 
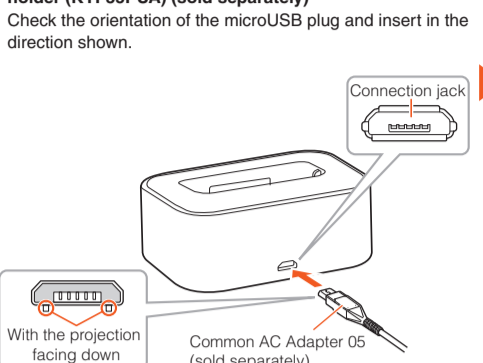 


- 3 Mount the product in the desktop holder (KYF35PUA) (sold separately) with the product closed

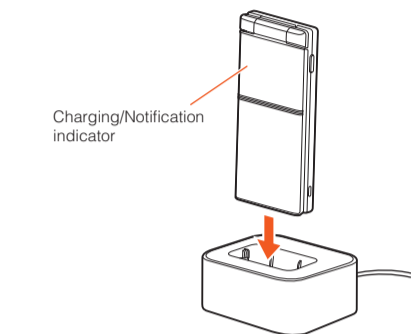

Charging with a PC

- 1 Connect microUSB Cable 01 (sold separately) to a chargeable USB port of a PC after the PC is activated completely
- 2 Check the orientation of the microUSB plug of microUSB Cable 01 (sold separately) and insert it straight into the external connection terminal

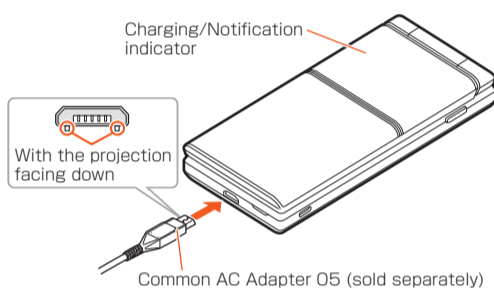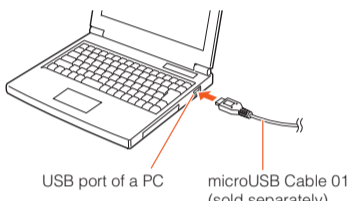

Turning the Power On/Off

Turning the Power On



Turning the Power Off



 
Initial Settings

The first time the power is turned on, a screen for making initial settings is displayed, and you can set an au ID. An au ID is an identifier for customers to use au services. Register your au phone number as an au ID. By setting an au ID, you can use various services provided by au such as au スマートパス (au Smart Pass), My au, and au WALLET. Main setting items are as follows.

au ID*	Register your au phone number or a character string for au ID (user ID).
au ID password	Register password for using au ID.

* au ID which is already used by another user cannot be registered.

 
● From the standby screen, press **[Settings]** → **[au ID Setting]** to set.

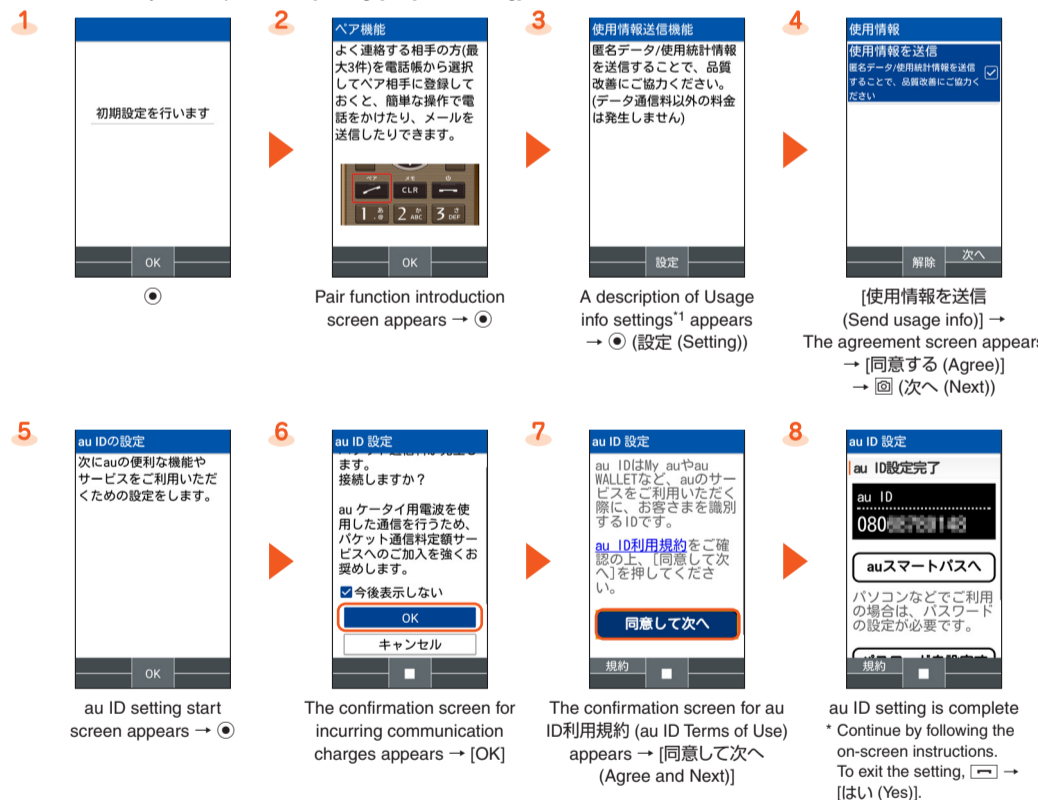

*1 Usage info settings are that you set whether to send anonymous data and usage statistics to help improve quality. (Data communication charges will occur only, and no other fees will be charged.)
Alternatively, from the standby screen, press **[Settings]** → **[More settings]** → **[About phone]** → **[Usage info settings]** → **[Send usage info]** to change the settings.

 
To Enter Numbers (Switching Character Type)

When a security code input screen such as ID confirmation appears, select the security code entry field and press **[Char.]** to change the character type to numbers.



Switching to English Display

You can switch the display from Japanese to English.

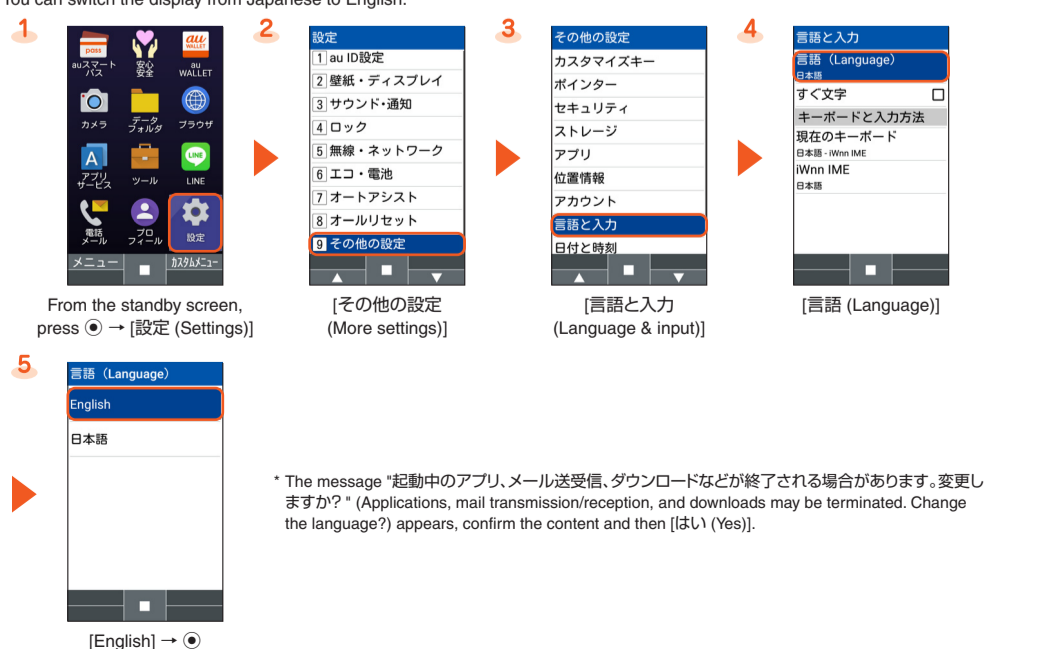 


* The message "起動中のアプリ、メール送受信、ダウンロードなどが終了される場合があります。変更しますか?" (Applications, mail transmission/reception, and downloads may be terminated. Change the language?) appears, confirm the content and then **[はい]** (Yes).

Setting Wi-Fi®

Use your home Wireless LAN (Wi-Fi®) or public wireless LAN to connect to the Internet.

* The battery is consumed faster when the wireless LAN (Wi-Fi®) function is ON. You are recommended to turn wireless LAN (Wi-Fi®) function OFF when not using wireless LAN (Wi-Fi®) function.

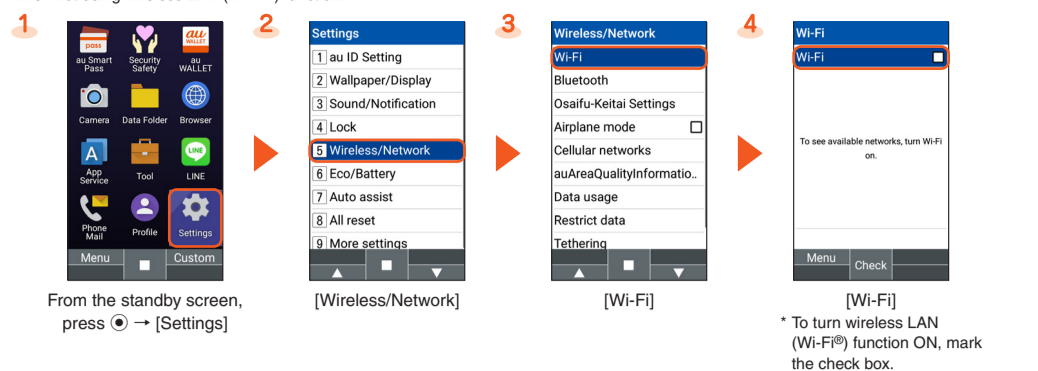

- Available Wi-Fi® networks are listed.
- Select a Wi-Fi® network to connect → **[Connect]** → Enter a password as required → **[Connect]** to connect the Wi-Fi® network.
- If the Wi-Fi® network you want to connect to is not detected, press **[Menu]** → **[Add network]** and connect to the Wi-Fi® network manually.

Checking On-Screen Status

Check the signal strength and battery level on-screen.



- ① Signal strength (received field strength)
 - **[Signal strength icon]**: Level display
 - **[Service area icon]**: Out of service area
 - The icon that indicates network is displayed at the upper left.
 - **[4G icon]**: 4G (LTE) available
 - **[Roaming icon]**: Roaming
- ② Battery level
 - **[100% icon]**: 100% / **[Empty icon]**: Empty / **[Charging icon]**: Charging
 - **[Battery Care Mode icon]**: Battery Care Mode is set to "ON"

E-mail

To use e-mail (@ezweb.ne.jp), subscription to LTE NET is required.

If you did not subscribe when you purchased the product, contact an au shop or Customer Service Center.

 
Your e-mail address is determined automatically after initial setting. You can change the e-mail address later.

Initial Settings

 
 


You cannot make initial settings in Wi-Fi® communication only, and an error message is displayed. You can set Wi-Fi® settings to OFF in the following operations.
From the standby screen, press **[Settings]** → **[Wireless/Network]** → **[Wi-Fi]** → Unmark "Wi-Fi".

Checking E-mail Address

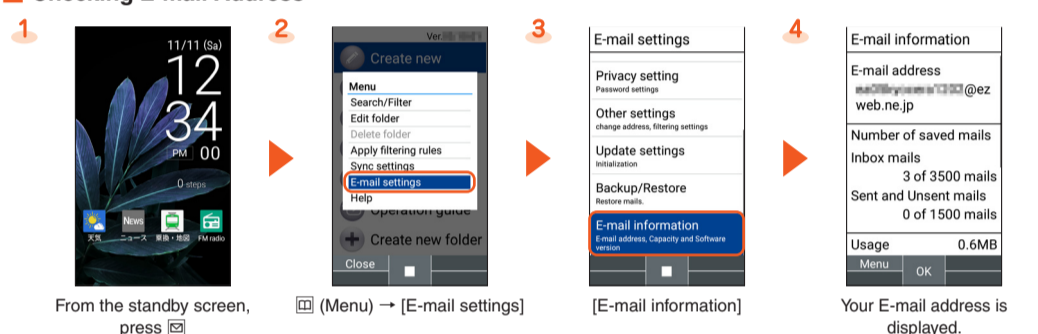

Changing E-mail Address

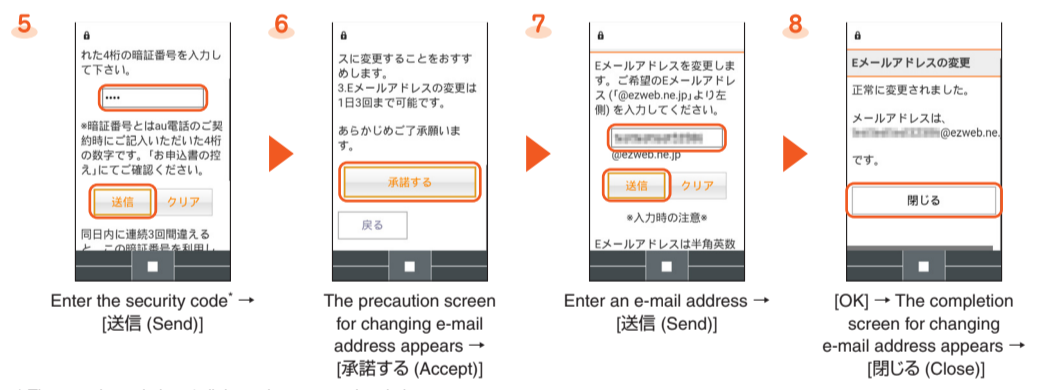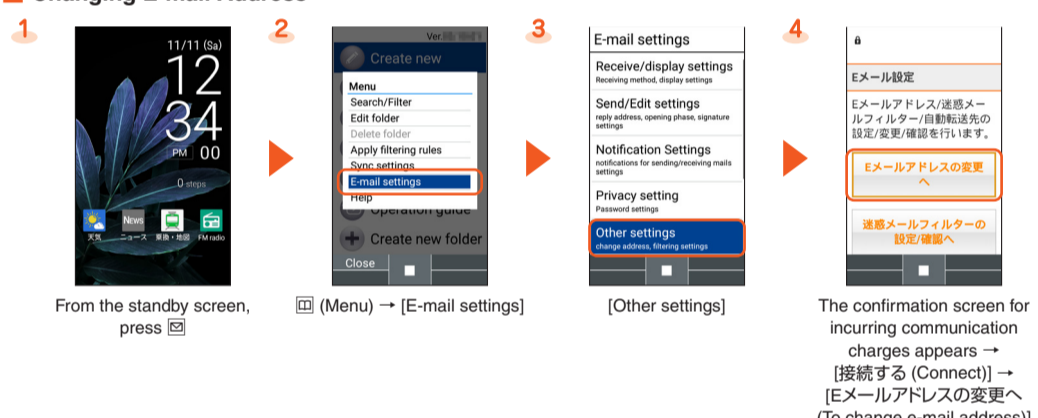

How to Transfer Data

 
- You can return/save data from your old au phone to the product using a microSD memory card or au server.
- To return data using an au server, store the data from the old au phone to au server beforehand. Setting au ID is required for using au server.
- To return data using a microSD memory card, save the data from the old au phone to the microSD memory card beforehand.



To use "Data Storage" application to back up contacts to au server automatically, set as follows.
From the standby screen, press **[Security Safety]** → **[Data Storage App]** → **[auサーバーを使う (Use au server)]** → **[アドレス帳の自動お預かり設定 (Contacts auto backup setting)]**

 
Increasing the Lighting Time of the Screen

You can set the length of time until the screen automatically turns off when not operating the product.

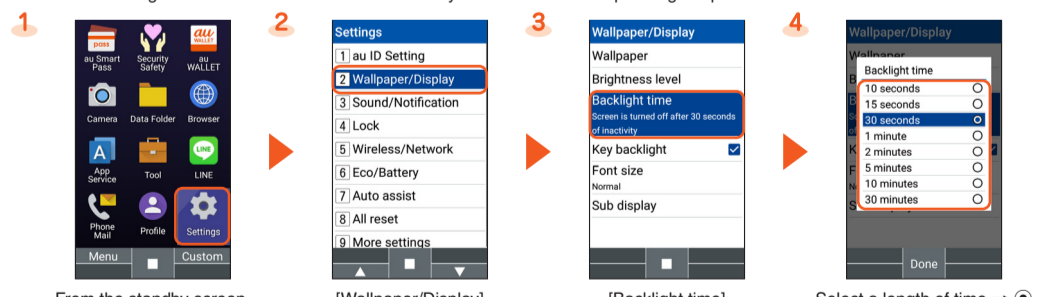


Adjusting the Brightness of the Screen

 
- You can adjust the brightness level of the screen.
- "Auto" detects the ambient light level to adjust the display brightness.

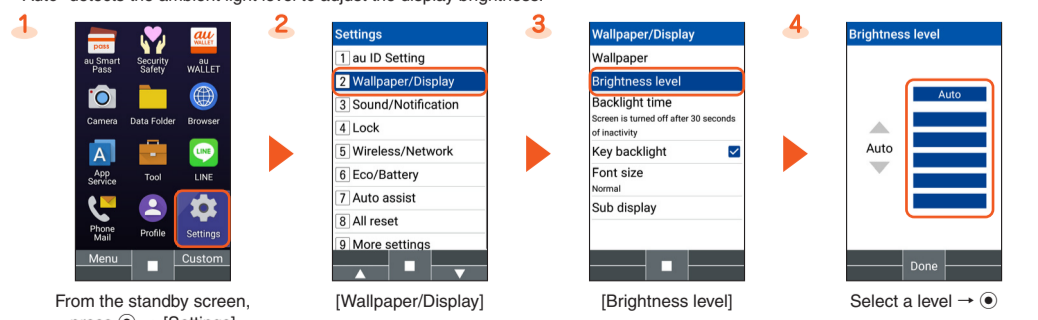
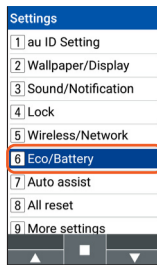 


 
Using Battery Care Mode

 
You can extend the battery life without fully charging the battery.

- Charging stops at 85% when the battery care mode is turned ON. And the heart mark  is attached to the battery icon.

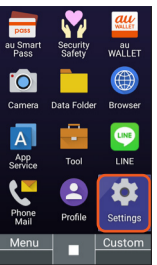- 

From the standby screen, press  → [Settings]
- 

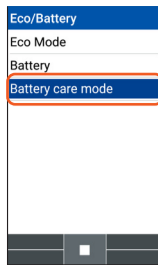 
[Eco/Battery]
- 

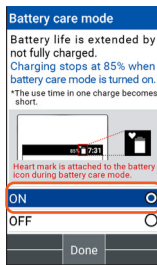
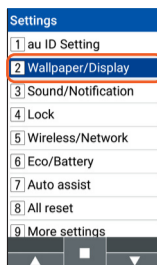 
[Battery care mode]
- 

 
[ON]

 
Changing Font Size (Character Size)


Set the font size to five levels such as Small/Normal/Large/Huge/Extra large.

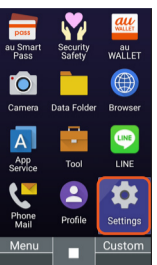- 

From the standby screen, press  → [Settings]
- 

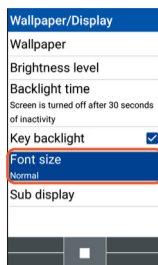 
[Wallpaper/Display]
- 

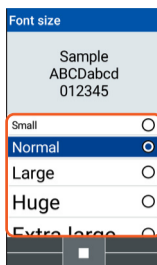
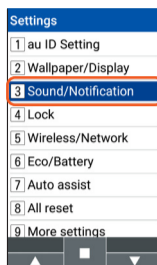 
[Font size]
- 

 
Select a font size → 

 
Changing Volume

Set the volume of ringtones, alarms, music and movies playback, etc.

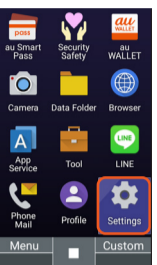- 

From the standby screen, press  → [Settings]
- 

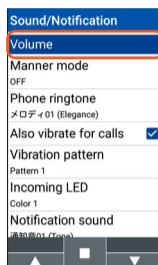 
[Sound/Notification]
- 

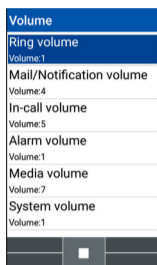[Volume]
- 

Set each item

Attaching a Strap

- Remove the back cover of the back of the product**
 - Lift the back cover by the notch using fingertips (fingernail, etc.) in the direction shown to remove.
- Let the strap attachment part through the hole, and hook it on the strap pin completely and pull it outwards**

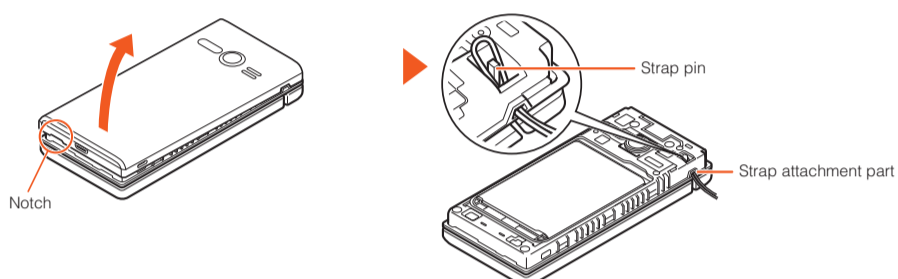

- Attach the back cover**
 - See "Installing/Removing the Battery Pack" for how to attach the back cover.