 
Notes on Usage

- "Setting Guide", "Basic Manual", "Notes on Usage", etc. are
- collectively referred to as "Instruction Manual". In this manual, Qua tab PX is usually referred to as the "product". In this manual, "microSD™ memory card", "microSDHC™ memory card" and "microSDXC™ memory card" are abbreviated as "microSD

■ Explanation of graphic symbols used in this manual to indicate actions that are not allowed and actions that must be done

(8)



May 2016, 1st Edition

Indicates that

disassembly is not allowed.

Indicates that handling with wet hands is not allowed.

Indicates that the power plug must be disconnected from the

Indicates that use in a

is likely to get wet or

 
Indicates an action that

allowing the product to

place where the product

■ Precautions common to the main unit, internal battery charging equipment, au Nano IC Card 04 LE, peripheral devices

Do not use, store or leave the product in hot places (e.g. by a fire, near a heater, under a kotatsu or futon, Don't in direct sunlight, in a car in the hot sun). May cause fire, burns, injuries, or electric shock



- 7 -

Turn the product OFF near high-precision electronic control equipment or electronic equipment using low-

power signals. Not doing so may cause the equipment to fail or

* Examples of electronic equipment to avoid:

Hearing aids, implanted pacemakers or defibrillators, other electronic medical equipment, and other automatic control equipment. Users wearing implanted pacemakers or defibrillators, or other electronic medical equipment should check with the manufacturer or sales outlet about the effect of radio frequencies on the equipment

When the display or camera leris is according broken, be careful of broken glass or exposed internal When the display or camera lens is accidentally parts of the product.

If you mistakenly touch broken or exposed parts, you may be injured.

If the internal battery leaks or gives off a strange smell immediately step value. smell, immediately stop using and remove it from the

vicinity of open flames. Not doing so may cause leaking fluid to ignite or explode.

Be careful not to let your pet bite the product. lay cause internal battery to ignite, burst, heat, or leak, and may cause fire, burns, or injuries.

Before using the product, be sure to read the "Notes on Usage" (this manual) available on the au homepage to ensure correct use Before you assume that the product is malfunctioning, check for possible remedies in the following au Customer Support site of au

n places where the signal does not reach (e.g. tunnels and basements). Also, communication is sometimes not possible in

poor reception areas. Communication is sometimes interrupted if you move into a poor reception areas during communications. Since this product uses radio waves, the possibility of communication intercepts by third parties cannot be eliminated (though LTE/WiMAX 2+ system has highly secure confidential

Since this product is a radio station under the Radio Law, you may be asked to temporarily submit the product for inspection in accordance with the Radio Law.

IMEI information of the product is automatically sent to KDDI CORPORATION for maintenance and monitoring operational status of the product.

- The Company is not liable for any damages arising from earthquakes, lightning, storms, floods or other natural disasters, as well as fires, actions by third parties, other accidents. intentional or mistaken misoperation by the customer, or use under other unusual conditions outside the responsibility of the The Company is not liable for any incidental damages (change)

disappearance of described content, loss of business income, disruption of business, etc.) arising from use or inability to use the

- 1 -

Do not put sand, dirt, or mud on the product or put it on them directly. Do not touch the

May cause fire, burns, injuries, or electric shock

Do not charge when the product is wet with water (drinking water, perspiration, seawater, urine of pet

May cause fire, burns, injuries, or electric shock.

Do not disassemble or remodel the equipment.

Do not let the product get wet with water (drinking water, perspiration, seawater, urine of pet animals,

May cause fire hurns injuries or electric shock

Do not put water (drinking water, perspiration, seawater urine of not pairs.)

For the waterproof function, refer to the following.

May cause fire, burns, injuries, or electric shock.
For the waterproof function, refer to the following.

Use the optional products specified by au for your tablet.

→P. 34 "Notes on waterproof and dustproof properties"

→P. 34 "Notes on waterproof and dustproof properties"

Not doing so may cause fire, burns, injuries, or electric

- 8 -

seawater, urine of pet animals, etc.) into the external

May cause fire, burns, injuries, or electric shock.

to which sand or others adhere.

on them directly. Do not touch the product with hands

For the waterproof and dustproof functions, refer to the

→P. 34 "Notes on waterproof and dustproof properties

For the waterproof function, refer to the following.
→P. 34 "Notes on waterproof and dustproof properties"

When Using the Product

http://www.au.kddi.com/support/mobile/trouble/repair Communication is not possible even inside the service area.

 It is recommended you keep a copy of important data on your PC's hard disk, etc. Whatever the cause of the defect or malfunction may be, the Company assumes no responsibility for alteration or loss of saved data. Contents saved in the product, such as contacts, mails and

avorites, might be altered or lost in an accident, fault, repair o mishandling. Be sure to keep a copy of important contents. Note that Company assumes no responsibility for any damages or lost profits resulting from altered or lost contents.

The Company is not liable for any damages arising from failure to

observe the described content of the "Basic Manual" or "Notes

The Company is not liable for any damages arising, for example

Captured image data or downloaded data may sometimes be altered or lost due to faults, repair or other handling of the

from malfunction caused by combination with connected devices or software not related to the Company.

product. The Company is not liable for any damage or lost income resulting from recovery of these data.

on Usage" (this manual).

Note that contents (both charged or free content) saved with the product cannot be returned to the customer when it is replaced for repair of a fault, for example.

· The product uses liquid crystal for its display. The display response speed may become slow when the ambient temperature is low, which is due to the property of liquid crystal and not a malfunction. The display response speed will return to rmal at room temperature. Although the display used on the product is made using high-

precision technology, some pixels (dots) might be lit or out at all times. Note that this is not a malfunction.

You are recommended to store copies of individual data such as photos you took, videos and music on your PC by sending each file as mail attachment, etc. Note, however, that you may not be able to make copies of any copyrighted data even by the above mentioned means.

- 2 -

⚠ WARNING

Do not drop, trample, or throw the product or give a strong force or vibration to it strong force or vibration to it. Don't May cause fire, burns, injuries, or electric shock.

Keep conductive materials (metal pieces, pencil lead, etc.) from coming in contact with the external connection terminal and prevent dust from getting inside.

Not doing so may cause fire, burns, injuries, or electric shock.

Do not cover or wrap the product with a blanket, etc. while using or charging while using or charging.

If charging is not complete after the specified charging

time has passed, stop charging. Not doing so may cause fire, burns, or injuries due to

Make sure to turn off the product or stop charging

before you get close to places such as a gas station where a flammable gas or dust can be generated. Not doing so may cause the gas to ignite or fire.

If the product gives off a strange smell, noise, smoke, or overheats or becomes discolored or deformed Do during use, charge, or storage, perform the following operations.

· Do not discard this product together with regular trash

collected at au shops and other places.

Imported by : LG Electronics Japan, Inc.

Manufactured by : LG Electronics Inc

Sold by : KDDI CORPORATION

Please cooperate in the collection of the product (including

optional accessories) when it is no longer needed to protect

* "The Company" as appears in this manual refers to the following

OKINAWA CELLULAR TELEPHONE COMPANY

Reproduction of the content of this manual in part or in whole

The content of this manual is subject to change without notice

Every effort has been made in the preparation of this manu

Should you notice any unclear points, omissions, etc., feel free to

nment and effectively use resources. Old product are

· Remove the power plug from the outlet or cigarette lighter socket.

Turn the product OFF.

Not doing so may cause fire, burns, injuries, or electric

CAUTION

On not use the damaged product. May cause fire, burns, or injuries.

Do not store the product in extremely humid, dusty or hot areas. May cause fire, burns, or electric shock.

For the waterproof and dustproof functions, refer to the →P. 34 "Notes on waterproof and dustproof properties"

When children use the product, do not let them use When children use the product, as list incorrectly without instruction by an adult for proper May cause injuries.

Do not store the product within reach of small children.

May cause small children to coold statu! Don't product or cause injuries and electric shock.

Be careful when using the product continuously for a long time or charging as it gets hot. Also, avoid touching the terminal for a long time by falling asleep unintentionally.

There may be a person with a cardiac pacemaker nearby at a place filled with people such as in a crowded train. Set *Airplane

While using the terminal for a long time such as using application, using data communication, watching videos, etc. or charging, the product, the internal battery, or the adapter may get hot. Directly touching a hot part for a long time, you may have redness, itching or rash on your skin, or it may result in low-temperature burns depending on your constitution and/or health condition.

■ Main unit

Tablet Etiquette

Consider people around you

shinkansen, a hotel lobby, etc.

places with many people around you.

place filled אונדו טפטקוס כב. mode" or turn off beforehand. - 4 -

Use of the product is not allowed in the following

Do not listen to music or watch videos while driving a car or

riding a motorbike or bicycle. Use of tablets while driving a car or riding a motorbike is prohibited by law. (Use of tablets while riding

to the traffic around you even when walking. Surrounding sounds

may not be heard clearly, and gazing at the screen might distract

your attention causing a traffic accident. Be especially careful at railroad crossings, on a platform, and at pedestrian crossings.

• Use of tablets on board is restricted. Follow the instructions of

· To prevent notification sound from bothering other people, power

off or use Silent mode at a movie theater, theater, museum

• In a city area, use in a place where you do not bother people

· It is extremely dangerous to walk while looking at the screen of

Move to a place where you do not disturb others while you are in

Be careful of sound leakage from earnhones in trains or other

· Ask permission if you take photos with the tablet camera.

· When using the camera, follow common rules of etiquette

the tablet. Do not operate the tablet while walking or by stopping

a bicycle may also be punishable by law.) In addition, stay alert

↑ DANGER

Do not throw the product into fire or apply heat. May cause fire, burns, or injury due to battery ignition, Don't rupture, overheat, or leak.

Do not apply excessive force such as sticking a nail into the product, hitting it with a hammer, or stepping

May cause fire, burns, or injury due to battery to ignite, rupture, overheat, or leak.

with clean water and see a doctor right away.

May cause loss of sight due to the influence of the fluid. etc. inside the internal battery.

 $\sum_{\text{Don't}} \text{Do not watch the display that blinks repeatedly for a long time.}$ May cause spasm, loss of consciousness, etc.

ACAUTION

If materials inside the display enters your eyes or mouth immediately that

clean water and see a doctor right away.

mouth, immediately flush your eyes or mouth with

Not doing so may cause loss of sight or poor physical condition due to the influence of the fluid, etc. inside the

When a medical institution has laid down designated areas where the use of the product is prohibited or is not allowed to be

brought in, follow the instructions of that medical institution

Safety Precautions (Observe Strictly)

■ Before using the product, thoroughly read these safety

■ These precautions are intended to protect you and others

■ The signs below differentiate between the levels of danger

that can occur if the product is not used within the

around you. Read and follow them carefully to avoid injury,

precautions for proper use. After reading, store the

damage to the product or damage to property.

precautions in a safe place.

specified guidelines.

Do not put foreign objects such as liquid like water (drinking water, perspiration, seawater, urine of pet Don't animals, etc.), metal pieces or burnable things into au Nano IC Card 04 LE inside the product or microSD memory card slot. Insert the au Nano IC Card 04 LE or microSD memory card in the correct place and in correct direction. May cause fire, burns, injuries, or electric shock.

Do not expose the camera lens to direct sunlight for an extended period an extended period.

May cause fire, burns, injuries, etc. by the light-collecting mechanism of the lens.

When on board an airplane, turn the power of the

product off or put it in Airplane mode.
Follow the instructions of each airline, because there are different restrictions for using the product on an airplane. Not doing so may cause electronic equipment of airplanes

to fail or malfunction.

If you do a prohibited act such as using the product in an airplane, you will be punished according to law

- 12 -

Always remove the power plug of the adapter from an outlet or a cigarette lighter socket when not using the Unplug adanter

shock.

- 13 -

This symbol indicates the potential and

nis symbol indicates the possibility o

nis symbol indicates the possibility of

ninor iniury*2 to a person or physical

mage*3 if the product is handled

product is handled incorrectly.

*1 Serious injury: This refers to loss of sight, injury, burns (high-

and low-temperature), electric shock, broken bones, injuries with residual aftereffects from poisoning, etc., and injuries

requiring hospital admission for treatment or long term hospital

admission for treatment or long-term hospital attendance as an

When using the product in a medical facility be sure

Not doing so may cause electronic equipment or electronic medical equipment to fail or malfunction. When the function

to automatically turn the product ON is set, disable the

When notification sound is ringing or in the standby mode, be sure to keep the product off of the ears.

earphone microphone connected to the product, adjust

continuously for a long period of time might adversely affect

your ears. Surrounding sounds may not be heard clearly

Also, when playing games, video, or music with an

Setting too loud a volume or using the earphone

Be careful when setting vibrator (vibration) or Be careful when setting violates and notification sound if your heart is weak.

Not doing so may cause harmful effect on heart.

If you wear an electronic medical device, check

with the equipment manufacturer or sales outlet to

determine how the device is affected by radio waves

Not doing so may cause harmful effect on the electronic medical device, etc.

the volume to the proper level.

causing an accident.

before using the product.

to observe the regulations of the facility.

Turn the product off where its use is prohibited

temperature), electric shock, etc. that do not require hospital

*3 Physical damage: This refers to extended damage to buildings,

*2 Minor injury: This refers to injuries, burns (high- and low

death or serious injury*1 to a person if the

DANGER to a person if the product is handled

orrectly.

incorrectly.

attendance as an outpatient.

furniture, livestock, pets, etc.

outpatient.

ninent danger of death or serious injury*1

Immediately remove the power plug from an outlet or a cigarette lighter socket if water (drinking water, power plug prespiration, seawater, urine of pet animals, etc.) gets power plug into the adapter.

Not doing so may cause fire, burns, or electric shock.

Always remove the power plug from an outlet or a

Be careful of the cut surface when transmission and its local C Card O4 LE as it may damage a part of your body such as fingers, etc.

- 20 -

Only use with the specified power source and voltage. incorrect voltage is used, it may cause fire, burns or electric shock.

AC adapter: 100 V AC (Connect to an AC outlet for internal household use) When replacing the DC adapter's fuse, replace it only with a specified fuse

Replacing with a different type of fuse might cause fire burns, electric shock, etc. For specified fuses, see the

instructions that come with the DC adapter.

Wipe off any dust that attached to the power plug.

When you connect the adapter to an outlet or a When you connect the adapter to an outset of a cigarette lighter socket, firmly connect it to the outlet. Do Not doing so may cause fire, burns, electric shock.

When you disconnect the power plug from an outlet When you disconnect the power plag...... or a cigarette lighter socket, do not pull the adapter Do cord with excessive force. Instead, hold the adapter to disconnect.

Not doing so may cause fire, burns, electric shock. When connecting/disconnecting the adapter to/from the terminal do not use form

the terminal, do not use force and connect/disconnect Do straight without bending. May cause fire, burns, injuries, or electric shock.

Immediately stop using the product if the external

Do restoring the deformation. May cause fire, burns, injuries, or electric shock due to short circuit of the charging terminal.

doctor after flushing To use the product in car, check with the automobile manufacturer or dealer to determine how vehicle

Not liquids etc.).

Not liquids connection terminal.

CAUTION

If the display breaks and the fluid etc. leaks out from inside, do not let the fluid context. inside, do not let the fluid contact with the skin on Don't your face or hands or clothes.

May cause loss of sight or skin problems.

If the fluid etc. enters your eyes or mouth, or contacts skin or clothes, immediately flush the contacted area with clean If the fluid etc. enters your eyes or mouth, immediately see a

doctor after flushing. Do not discard the product together with other garbage.

Don't May cause ignition resulting in fire, burns, or injuries. Also may cause environmental destruction. Bring them to a sales outlet such as an au shop. If your local municipality has a battery recycling program, dispose

of them as provided for. If fluid etc. leaks out from the internal battery, do not let the fluid contact with the fl not let the fluid contact with the skin on your face or

hands. May cause loss of sight or skin problems.

If the fluid etc. enters your eyes or mouth, or contacts skin or clothes, immediately flush the contacted area with clean

If the fluid etc. enters your eyes or mouth, immediately see a

devices are affected by radio waves before using. n rare cases, using the product in some vehicle models cause the vehicle's electronic equipment to malfunction. In that case, stop using the product immediately.

The use of the product may cause itching rashes eczema, or other symptoms depending on the user's physical condition. If you develop skin problems, stop using the product immediately, and see a doctor. For materials of parts →P. 22

Make sure that there is no adhered metal pieces (cutter blade, staples, etc.) as the speaker part of the product generate magnetism. ot doing so may cause injuries, etc. due to adhered

When watching the display screen, keep a certain

distance from the display in a fully bright place.

Not doing so may reduce visual acuity.

■ Internal battery

If materials inside the internal battery enters your eyes or mouth, immediately flush your eyes or mouth with clean water and see a doctor right away.

Not doing so may cause loss of sight or poor physical condition due to the influence of the fluid, etc. inside the internal battery. If the internal battery leaks or gives off a strange

smell, immediately stop using and remove it from the vicinity of open flames. Not doing so may cause leaking fluid to ignite or explode.

CAUTION

If the fluid etc. leaks out from the internal battery, do not let the fluid contact with the action

May cause loss of sight or skin problems. If the fluid etc. enters your eyes or mouth, or contacts skin or clothes, immediately flush the contacted area with clean If the fluid etc. enters your eyes or mouth, immediately see a

Charging equipment



Do not use the adapter cable if it is damaged.

May cause fire, burns, or electric shock

O not use the adapter in a bathroom or other highly humid area. Don't May cause fire, burns, or electric shock. Always use the DC adapter with a negative-ground vehicle. Do not plug it into a restriction

vehicle. Do not plug it into a positive-ground vehicle. Don't May cause fire, burns, or electric shock, etc. If it starts to thunder, do not touch the adapter May cause electric shock, etc.

May cause fire, burns, or electric shock.

Do not place heavy objects on the adapter.

May cause fire, burns, or electric shock.

t metal objects with it.

On not apply force on the connected parts when the adapter is connected to the product. Don't May cause fire, burns, injuries, or electric shock

connection terminal, or power plug with wet hands. No May cause fire, burns, or electric shock.

If materials inside the internal battery enters your eyes, do not rub your eyes and immediately flush them

- 11 -

When connecting/disconnecting the AC adapter to/ from an outlet, do not contact a metal strap or other May cause fire, burns, or electric shock.

Do not short the external connection terminal while it is connected to an outlet or the cigarette lighter socket. Do not touch the external connection terminal with a part of your body such as your hand or finger.

Do not touch the adapter cord, USB cable, external

power plug Not doing so may cause fire, burns, injuries, or electric

Always remove the power pius from an action of cigarette lighter socket when cleaning the equipment. Not doing so may cause fire, burns, electric shock

Do not touch the adapters for a long units will are connected to an outlet or cigarette lighter socket.

■ au Nano IC Card 04 LE

 
CAUTION Be sure to read the following cautions before use. Be careful of the cut surface when handling au Nano

- 15 -- 16 - 17 -- 19 -


⚠ WARNING

Wearers of medical equipment such as implanted pacemakers or defibrillators must carry and use the Do product at least 15 cm away from the implanted


The product's signals may affect the performance of electronic medical equipment.



electronic medical equipment.

 

 Wearers of implanted pacemakers or defibrillators may be nearby. The product's signals may affect the performance of electronic medical equipment.



medical equipment.

- 21 -

Putting stickers or sheets (e.g. commercially available protective) films, peep prevention sheets) on the display might cause

mproper reaction of touch panel. When carrying the product in your bag, take care not to put the touch panel close to metals or other conductive materials, as it might cause false operation of the touch panel.

■ Internal battery



(The internal battery of the product is a lithium-ion **Li-ion00** When you purchase your product, the internal battery

is not fully charged. Charge the battery before using the product. Also charge the battery before using the product if you have not used the product for a long time.

- Use in very hot or cold environments, for example, when left in a car with the windows closed in summer, will cause the battery capacity to drop and shorten the available battery usage time his will also shorten the battery pack service life. Try to use the
- After the internal battery is charged, battery power decreases bit by bit even if the product is not used. The internal battery may be discharged if the product is not used for a long time. It is recommended to charge the product before use.

internal battery as far as possible at room temperature.

 The internal battery is a consumable item. If the performance or the internal hattery does not recover (e.g. the usable time after each charge has become extremely short), the battery is at th end of service life, so stop use. Because the battery is a built-in type, an au shop will accept holding over and repair for a charge You may not use the product for a certain period. Please be forewarned. The life time of the internal battery depends on the

Internal batteries sometimes swell up as they approach the end of their service life. This is due to the properties of lithium-ion

- 22 -

■ The materials of parts used on the product are as follows.

Material

? resin

resin

ainless ste

crylic resin

PET resin

Part

uter case (front

uter case (rear)

beaker grill

amera lens

Qua logo (rear)

amera lens cov

wer key, Volume key

amera lens decoration

Surface treatment

JV coating

JV coating

V coating

Charging equipment

 Do not wrap the cord of the specified charging equipment (sold separately) around the adapter itself. Do not forcibly bend a plug of the charging equipment or the connection between the connector and power cord. Do not place heavy objects on the adapter cord or USB cable, or apply unnecessary force by strongly pulling them, etc. May cause malfunction.

batteries, and is not a problem in terms of safety.

When unplugging the plug of the specified charging equipment (sold separately) from the power outlet or cigarette lighter socket, hold and pull the power plug. Pulling on the cable might

■ au Nano IC Card 04 LE

- Do not forcibly remove or insert the au Nano IC Card 04 LE. Be. your au mobile device.
- You are responsible for any damage caused by inserting your au Nano IC Card 04 LE into some other IC card reader/writer, etc.
- Do not put stickers, etc. on the au Nano IC Card 04 LF.
- Do not insert au Nano IC Card 04 LE with a conversion adapter. May cause malfunction.
- Do not damage the card (use in a hot place, throw into fire.) contact the metal part with foreign object, give an impact, bend. apply a load moisten etc.) May cause data loss or malfunction

These precautions are provided to prevent damage to the product and ensure that performance can be fully demonstrated.

Handling Precautions

Thoroughly read these precautions to ensure correct use. ■ Precautions common to the main unit, internal battery,

- charging equipment, au Nano IC Card O4 LE, peripheral devices Do not apply excessive force to the product during use. Be sure not to put the product into a tightly packed bag or place a heav object on the product in a bag. Doing so might damage the
- display or internal circuit hoard resulting in a malfunction. Keeping an external device connected to the external connector or earphone jack might damage the connector resulting in a malfunction. Such damage and malfunction are not covered by the warranty, even if there is no external damage. To ensure waterproof property (equivalent to IPX5 and IPX7) of
- this product, use the product with the tray tightly closed.

 Note that the waterproof property is not guaranteed in every usage condition. Do not allow water to get inside the product or splash water on the charging equipment or optional accessories.

 Do not attach/remove the tray in the rain or with water drops on the surface of the product. Doing so might cause water intrusion Ilting in internal corrosion Malfunctions determined to be caused by water intrusion are not covered by the warranty.
- Do not use the product in extremely hot, cold or humid places. (Use within an ambient temperature range of 5°C to 35°C and numidity range of 45% to 85%.) - au Nano IC Card O4 LE (when attached to the product unit)
- Do not use in places subject to lots of dust or vibration. May cause malfunction

- 23

When photographing important occasions, take a trial shot in advance and check the shot image to make sure it is correctly

- Do not shoot where shooting is prohibited.
- Copyrights and rights of portrait You are not allowed to copy, distribute, publish, modify or edit the data you shot, recorded or downloaded using the product vithout the consent of the copyright holder, except for persona
 - use, under the copyright law. In addition, do not use or modify portraits or names of other individuals without their consent, as it might infringe on rights of
- Note that shooting and recording may be restricted at some live performances, shows and exhibitions even for personal use. Be careful about the copyright and portrait right when posting

■ FCC Compliance information The product is certified by Federal Communications Commission

■ Backup content on the product

FCC ID of this product is ZNFNSO. Or you can check as follows. <<How to check>>

Occasionally clean the external connection terminal and earphone terminal with a dry cotton bud. Dirty terminals may

minals as this may deform them.

on the outer casing or cause malfunction.

on the situations, but this is not abnormal.

risk lightning strikes and electric shock.

other devices might cause malfunction.

malfunction.

from short-circuit

of the AC adapter.

mishandling, etc.

result in a poor connection. Also do not forcefully clean the

Clean the product with a soft dry cloth (such as the type used)

Use as far away as possible from land-line phones, TVs, and

The product may become warm while charging etc., depending

Do not use outside when you can hear thunder. Doing so might

Be sure to use only the specified peripheral devices. Use of

Do not put the product into a heating cooking device such

Do not allow conductive foreign objects (metal fragments,

as a microwave oven or high-pressure container. May cause

• The customer is not allowed to disassemble, modify or repair the

product. May cause malfunction. Modification of the product is in

violation of the Radio Law and Telecommunication Business Act.

pencil leads, etc.) to come into contact with or get inside the connection terminal, earphone microphone terminal, etc. to avoid

the connection terminal, earphone microphone terminal, etc.

If the product gets wet, immediately disconnect the power plug

- 24 -

Please back up important content recorded or downloaded

for the product to an outside source. Content recorded to

memory on the product sometimes disappears or is altered by unexpected factors, such as static electricity or a fault, repair,

Do not place near corrosive chemicals or in places where

corrosive gas is generated. May cause malfunction

for eveglasses). Forceful rubbing with a dry cloth may scratch

the display. The display may be stained if splash or smear is left

attached to the surface. Wiping the product using alcohol, thinner

benzene, detergent, glass cleaner, etc. might erase the printing

On the Home screen ▶ [基本機能 (Basic functions)] ▶ [Settings] ► [About tablet] ► [Regulatory & Safety]

Available Security Codes

The product has various security codes that you can use. The available security codes are as follows. Do not forget the various security codes that are set as they are necessary for various operations and contracts.

Make sure to change the initial value to your own unique number.

Security code	
Example of usage	To do remote operation of voice mail and call forwarding services from a landline phone
or dadge	To use Customer Service Center and to do various inquiries, applications, and modifications on the au homepage
Initial	A four digit number chosen by the customer and noted on the application form

 Do not use while driving a car or riding a motorbike or bicycle or while walking. Use while driving a car or riding a motorbike is prohibited by law. Use while riding a bicycle may be punishable

 Using or charging the product inside a bag or covered with bedding, etc. may cause malfunction

- When using a charging equipment or external device, insert/ remove the connector straight to/from the terminal. Make sure the orientation of the connector. Unless it's correct, it may cause malfunction.
- Do not expose the camera lens to direct sunlight for an extended period. May cause malfunction.
- Do not store or leave the product in places subject to direct sunlight (e.g. in automobiles), places that get hot, places that get extremely cold, or in humid or dusty places. May cause nalfunction
- Do not leave the equipment on unstable or sloping surfaces. Be careful especially while charging or the vibrator is set. The product might fall causing malfunction. When charging the product, do not exceed the ratings for
- outlets or wiring equipment

■ Main unit

- The product's battery is built in, and cannot be replaced by the customer. For battery replacement, contact an au shop or Customer Service Center.
- Do not forcefully press, tap, or intentionally subject the display to strong impact. Doing so might cause scratching or damage.

- 25

Example To prevent unauthorized use of the au Nano IC Card

 Do not forcefully press your fingernails, sharp objects, or hard objects against keys or display surface. Doing so might cause scratching or damage.

The touch panel is designed to be lightly touched by fingers. Do not apply strong pressure with your fingers or sharp-pointed objects (such as fingernails, ballpoint pens, and pins) on the touch pane touch as inigerials, sale, and pinis, of the touch panel has not work even if you touch it. Note that it may cause malfunction.

- Operation with gloved hands Operation with fingernails
- Operation with a foreign object placed on the touch panel
 Operation with a protective sheet or sticker on the touch
- Operation with water drops left or frozen on the surface
- Operation with wet or sweaty fingers
- Operation under water
- Never use modified products. Use of a modified device violates the Radio Law and Telecommunications Business Law. The product has acquired the certification of conformity with technical regulations for the specified radio station based or the Radio Law, and to such regulations as technical conformity based on the Telecommunications Business Law. And the "Technical Conformity Mark 😭" is checkable on au mobile devices as a certificate. <<How to check>>

On the Home screen ▶ [基本機能 (Basic functions)] ▶ [Settings] ► [About tablet] ► [Regulatory & Safety] If the product is modified, technical standard compliance

Never use the product without the valid certification. Doing so violates the Radio Law and Telecommunications Business Law.

 Take care not to place magnetized items such as magnetic cards, speakers and TV sets near the product, as it might cause malfunction Putting a strong magnetism close to the product might cause

- 26 -

Do not bring magnetic cards such as cash cards, credit cards, and prepaid cards near to the product. Doing so might result in loss of recorded information.

 When you put the product in your bag, take care so that the display does not come in contact with metal objects or other hard objects. Doing so might cause scratching or damage.

Also, be careful not to scratch or damage the display by using a strap whose metal or other hard part comes in contact with the

- When suddenly brought into a warm place from a cold place. or when in a humid location, or when used where temperature suddenly changes such as near the air discharge port of an ai conditioner, water droplets (i.e. condensation) sometimes form inside the product. Note that when used under conditions such as this, the humidity might cause corrosion or a fault.
- While writing/reading data to/from a microSD memory card, do not subject the product to vibration or impact or turn off the power. Doing so might cause loss of data or a fault.
- Use the product with the tray, etc. closed. If the tray is open, dirt or water may get inside causing malfunction.
- Do not allow liquids, metal objects, and other foreign matter to get inside the microSD memory card slot or au Nano IC Card 04 LE slot inside the product. May cause malfunction.
- Do not drop, trample, or throw the product or give a strong force or vibration to it. May cause malfunction.
- Do not place the product directly on sand at a heach, etc. Sand. or other small particles might get inside the microphone or speaker, causing the volume to drop. If sand gets inside the product's main unit, it might cause malfunction

Notes on waterproof and dustproof properties

This product has a waterproof property equivalent to IPX5*1 and IPX7*2, as well as a dustproof property equivalent to IP6X*3 on the condition that the tray is securely attached (based on in-house testing). Before using the product, thoroughly read "Important items

to remember before use" and "Tips for comfortable use" to ensure correct use. Failure to follow the contents described in these sections may cause the intrusion of water, sand or other foreign material, resulting in overheating, fire, electric shock, injury or a fault.
*1 IPX5 equivalent means that the product will maintain its

- operability as a communication device even if it is sprayed with water from a 6.3 mm diameter nozzle at a distance of about 3 meters for more than 3 minutes at a rate of about 12.5 liters per minute from any direction. *2 IPX7 equivalent means that the product will maintain its operability as a communication device with no water getting
- about 30 minutes.
- its function of no grit and dust getting inside the main unit of grit and dust cannot be prevented completely)

by the warranty.

- 28 -

- effective when the covers are securely closed.
- Do not open/close the tray if your hands or the main unit is wet. Do not splash the product with or immerse it in liquid other. than tap water (seawater, a swimming pool, hot spring, soap, detergent or water with bath salts, alcohol, juices, seasonings, etc.). Do not use in places subject to direct splashing with pet









 Do not place the product directly on the sand at a beach, etc. Sand or other small particles might get inside the microphone or speaker. ausing the volume to drop. If sand gets inside the product's mair unit from the gap, etc., it might cause overheating or a fault.



- Do not leave the product in a humid place such as a bathroom or kitchen for an extended period of time.
- Even after water is drained, the inner parts might be still wet. Although you can use the product, do not place it near things that must not get wet. Take care not to wet your clothes, bag or contents of the bag.

- Drain water if it becomes temporarily hard to hear the sound due
- Avoid spraying the product with high-pressure water or
- Do not wash the product in a washing machine or ultrasound
- designed to withstand the hot temperatures.
- a warm hathroom etc.
- Trav
- particle (a hair, etc.) on the seals can cause water leak. Do not attach/remove the tray with gloved hands. Just a small particle (a hair, etc.) on the seals can cause water leaks. Wipe off any minuscule droplets of water or dirt with a clean dry cloth efore closing the tray.
- ecomes ineffective. If any liquid other than plain water gets on the product
- alcohol) gets on the product, immediately rinse it with plain ou can wash the product under a mild flow (up to 6 liters pe

your hands holding the tray so that they do not open.

- submerging it in water for extended periods of time, as the roduct is not designed to withstand high water pressure.
- Do not immerse the product into a bathtub. The product is not
- Extreme changes in temperature cause condensation resulting in a malfunction. Wait until the main unit reaches room temperature before you bring the product from a cold place into
- This product does not float on water.
- If the tray is deteriorated or damaged, the waterproof property
- If any liquid other than plain water (e.g. seawater, deterge

seals, causing water leak.

temperatures.

- and the tray with a clean dry cloth without removing the tray. product without wiping off water.
- Rubber seals
- dustproof property. Do not damage or remove the rubber seals. Take care not to get the rubber seals caught when closing the card slot cover. Forcibly closing the tray with the rubber seals caught may damage them resulting in loss of waterproof. dustproof property. Just a small particle (a hair, etc.) on the seals can cause water leak. If any liquid other than plain wate (e.g. alcohol) gets on the rubber seals, it may cause deterioration in durability.

 Do not insert the sharp pointed object in the tray. Doing so
- It is recommended to replace the parts for maintaining waterproof/dustproof property once every two years regardless of whether any abnormality is present. For information on part replacement, contact an au shop near you. Heat resistance
- Shock This product is not resistant to shock. Do not drop the product or subject it to shock. Also, do not jab the speaker with any sharp object. Doing so might damage or deform the main unit causing

 
■ Draining water after wetting the product

After the product gets wet, be sure to drain water from the power key, Q button, volume key, earphone terminal, and external connection terminal. If you use the product after it gets wet, water remaining in those parts might wet your clothes or bag, or the sound might become hard to hear.
Follow the steps below to drain water.

- 31 -

Carefully wipe the moisture off the main unit with a dry towel, cloth, etc.

- 2 Hold the product firmly and shake it about 20 times in the direction of the arrow shown in the figure until water drops no longer fly off.
- 3 Cover the power key, volume key, and Q button with a towel, cloth, etc. and press each key two to three times.



dry towel, cloth, etc.

Privacy Protected Function

Initial

value

Function

of usage 04 LE by third parties

The function shown below is installed in the product to protect the privacy of the saved data. $\begin{tabular}{ll} \hline \end{tabular}$

Make sure to change the initial value to your own unique

	Set Swipe, Knock Code, Pattern, PIN, or Password
lock	to secure data when turning on the tablet or when
	unlocking the screen.
	<u> </u>

Description

To prevent unauthorized use of the au Nano IC Card 04 LE by a third

PIN Code

party, you can set the product to require PIN code entry every time the power is turned on. You also need to enter PIN code when setting whether the PIN code entry is required.

the PIN code is incorrectly entered three times consecutively, the PIN code will be locked. You can unlock the PIN code using PUK code The default PIN code is "1234" and does not need to be changed but you can change the PIN code to any four- to eight-digit

number if necessary, and you can change settings so that the PIN code must be entered. If you require a PIN code to be entered make sure to change the nber to your own unique number

■ PUK code

case the PIN code is locked, you can unlock it by entering the PUK code is an eight-digit number given at the time of purchase, which is printed on the back side of the plastic card on which

- your au Nano IC Card 04 LE is attached. After entering the PUK code, you need to set a new PIN code in "Change SIM PIN".
- · If the PUK code is incorrectly entered 10 times consecutively. contact an au shop, PiPit or Customer Service Center

memo

 If PIN is locked, the product may restart to protect its security. · PIN code is not reset by Factory data reset.

inside the main unit even if it is gently submerged in a tank of still tap water at room temperature to a depth of 1 meter for *3 IP6X equivalent means that the product will securely maintain

even after it has been placed in an apparatus with grit and dust of diameters of 75 $\mu \mathrm{m}$ or less and shaken for 8 hours (ingress Proper operation of the product in every possible condition

during actual use is not guaranteed. Malfunctions determined to be caused by mishandling by the customer are not covered

- 33 -- 34 -

- The Bluetooth® function and the wireless LAN (Wi-Fi®) function of
- The 2.4 GHz band used by wireless LAN (Wi-Fi®) and Bluetooth® devices is shared by various other devices. For this reason, the
- are generated or near electric products, AV and OA equipment, or other magnetized devices. Subjecting this product to magnetic or electrical noise might
- ncrease noise and prevent it from performing communications
 This product is particularly susceptible to noise when it used near a microwave oven.) Using this product near a TV, radio or similar appliance might cause reception interference and disrupt TV images.
- The searching might not be successful if there are multiple
- Use of tablets on board is restricted. Follow the instructions of each airline. The communication speed and connectable range vary depending

The frequencies used by the Bluetooth® and/or wireless LAN (Wi-Fi®) function of this product are in the 2.4 GHz band. In this frequency band, other similar wireless stations, in-plant wireless stations for mobile unit identification that require a license to use, such as factory production lines, specific small power. vireless stations that do not require licenses, amateur wireless stations (collectively called "other wireless stations" from here on) are operated in addition to home electrical appliances sucl as microwave ovens, devices for industrial, scientific and medical

2.4 GHz Frequency Band Precautions

1. Before using the product, make sure that "other wireless stations' are not in operation nearby.

2. In the event that instances of radio wave interference have

occurred between this product and "other wireless stations", immediately either relocate this product or stop operation of the device (stop the emission of radio waves).

3. If you are unclear on any points or are troubled by anything, contact an au shop or Customer Service Center.

The connections between this product and all other Bluetooth® and wireless LAN (Wi-Fi®) devices have not been confirmed. Therefore connections with all Bluetooth® and wireless LAN (Wi-Fi®) devices have

This product supports security features for wireless communication

that are compliant with the Bluetooth® and wireless LAN (Wi-Fi®) standard specifications, but the security may not be sufficien depending on the usage environment and configuration. Be careful when making data communication using Bluetooth® or wireless LAN

- 41 -

- Important items to remember before use • Make sure that the tray is tightly closed. Waterproofness is only
- urine. If any liquid falls on the product, immediately rinse it of with tap water.







to water remaining in the microphone or speaker.

Make sure that the tray is securely attached. Just a small

minute) of tap water at room temperature (5°C to 35°C) at a distance of about 10 cm from the faucet or showerhead.

If the product gets dirty, instead of using a brush, wash it with

 After the product gets wet After the product gets wet, drain water, and wipe the main unit In cold climates, water on the main unit may turn to frost. Using the product with frost may cause a fault. Do not leave the

Rubber seal in the tray plays an important part in waterproof/

Do not immerse the product into boiling water or splash boiling

vater on it. The product is not designed to withstand the hot

might damage or deform the product or damage the rubber

When shaking the product, confirm the safety around you and hold it firmly so as not to drop it.

4 Wipe the moisture coming out from inside with a



5 Place it on a dry towel, cloth, etc. and let it dry at ambient temperature. (Around 30 minutes)

If it is not fully dried, the sound may become hard to hear.

- 32

Let it fully dry before use. Precautions on charging The supplied and optional accessories are not waterproof/

charging.

 Never charge the battery if the main unit is wet. Doing so might cause fire, burns, injuries, or electric shock. Check that the main unit is not wet. If you are charging the battery just after the product gets wet, drain water well and wipe remaining

water off with a clean dry cloth before charging.

vith wet hands. Doing so might cause electric shock.

dustproof. Be sure to check the following points before and after

 Do not splash water over the specified charging equipment (sold) separately) when using them. Do not use them near water such, as in a bathroom, shower room, kitchen or washroom, Failure to do so might cause fire, burns, electric shock, or malfunction. Do not bring them into a bathroom, etc. even when you are not charging with them. Failure to do so might cause fire, burns, electric shock, or

Do not touch the specified charging equipment (sold separately)

Bluetooth®/Wireless LAN (Wi-Fi®) Function

- this product conforms to the domestic standards of Japan, FCC standards, and EC directives, and has been certified.
- communication speed and connectable range may be decreased, or disconnection may occur, due to interference from other devices. Do not use this product in places where electroma
- wireless LAN (Wi-Fi®) access points near to the product or the same channel is being used.
- on the distance between communication devices, obstacles and the devices to connect.

- 35 -

 
• Wireless LAN (Wi-Fi®) has the advantage that it can be freely connected anywhere within the radio wave range, as it uses radio waves for exchanging information. At the same time, there is a risk that a malicious third party may obtain unauthorized access if security settings have not been configured. You are recomm the Radio Law. to configure security settings before using wireless LAN at your The channels used on the product are as

 The Company assumes no responsibility for leakage of data of information that may occur during Bluetooth®/wireless LAN (Wi-Fi®) communication.

Since Bluetooth® and wireless LAN (Wi-Fi®) functions use the same frequency band, using the both functions at the same may cause radio wave interference resulting in decreased communicatio speed or disconnection from the network. If connection fails, stop using either of the Bluetooth® and wireless LAN (Wi-Fi®) functions.

Bluetooth® and wireless LAN (Wi-Fi®) functions of this product use frequencies in the 2.4 GHz band.





decision and responsibility.

This product uses the 2.4 GHz band. FH-SS and other schemes are used as the modulation scheme. The interference distance is about 10 m or less.

Wireless LAN (Wi-Fi®) function: 2.4DS4/0F4 This product uses the 2.4 GHz hand, DS-SS and OEDM are used. as the modulation schemes. The interference distance is about

Bandwidth to use: Full band

40 m or less.

This means that full band can be used, and that band of mobile unit identification devices can be avoided

Available channels differ depending on the country

For use in an airplane, check with the airline company in advance.

- 42 -

OpenSSL License

[OnenSSI License]

Copyright © 1998-2011 The OpenSSL Project. All rights reserved This product includes software developed by the OpenSSL

Project for use in the OpenSSL Toolkit. (http://www.openssl.org/) "AS IS" AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OpenSSL PROJECT OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY.

WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY

[Original SSLeav License] Copyright © 1995-1998 Eric Young (eay@cryptsoft.com) All

rights reserved. This product includes cryptographic software written by Eric Young

(eay@cryptsoft.com) THIS SOFTWARE IS PROVIDED BY ERIC YOUNG "AS IS" AND

ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING

- 49 -

Wireless LAN (Wi-Fi®) function of this product uses 5 GHz hand. Using the 5.2 GHz hand. and 5.3 GHz band outdoors is prohibited by

IEEE802.11 a/n/ac W52 W53 W56

■ HT20 [a/n] , VHT20 [ac] W52 (5.2 GHz band/36, 40, 44, 48 ch) W53 (5.3 GHz band/52, 56, 60, 64 ch) W56 (5.6 GHz band/100, 104, 108, 112, 116, 120, 124, 128,

■ HT40 [n] , VHT40 [ac] ■ VHT80 [ac] W52 (5.2 GHz band/38, 46 ch) W53 (5.3 GHz band/54, 62 ch) W53 (5.3 GHz band/54, 62 ch) W56 (5.6 GHz band/102, 110, W56 (5.6 GHz band/106, 122

- 43

NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE. EVEN IF ADVISED OF THE POSSIBILIT OF SUCH DAMAGE.

Open source licenses

To obtain the source code developed under GPL, LGPL, MPL, and other open source licenses that are contained in this product, please visit http://opensource.lge.com. You can download the details of all applicable licenses including source code, copyright notices, and notices stating no responsibility for warranty.

If, within three years of purchasing the product, you request the open source code for the software contained in the product by email (opensource@lge.com), once you pay the minimum necessary costs for media and delivery, etc., you will be provided with a CD-ROM.

For software installed in this product or part of the installed software, you are not allowed to change, translate or adapt, reverse, engineering, decompile, reverse assemble them, or do anything related to the above. This product is licensed complying with the MPEG-4 Visual

Patent Portfolio License. If you use it for private purpose without any profits, you are allowed to use them only when: Recording videos that are compliant with the standard of MPEG-4

- Visual (hereinafter referred to as MPEG-4 Video)
- Playing MPEG-4 Videos recorded personally by consumers not
- · Playing MPEG-4 Video supplied from the provider licensed from

For further utilizing such as promotion, in-house use or profitmaking business, please contact MPEG LA, LLC in U.S.

This product has been granted the licenses which code (i) AVC

standard compliant video (hereinafter stated as AVC video) - 50 -

- 51

5 GHz Frequency Band Precautions

 Since a constant Internet connection is possible with the product. packet communication may be performed automatically by some applications, resulting in high packet communication charges. Therefore, subscription to a packet communication charge discount service or flat late plan is recommended.

Notes on Packet Communication Charge

 On the product to browse websites, download applications. communicate using applications, send/receive e-mails, and configure various settings, connection to the Internet is required, to which packet communication charge applies.

* Packet communication charge does not apply to wireless LAN

(Wi-Fi®) connection

Applications

• Be sure to check the security of the application, then install it at your own risk. Some applications might cause virus infection, damage various data, and send out your location information, usage history or personal information stored in the product via the Internet.

- The Company assumes no responsibility for any operation problems that might be caused by the applications you have installed. In such case, you may be charged a repair fee even during the warranty period.
- The Company assumes no responsibility for any disadvantage brought to you or any third party by applications you have installed.
- Depending on applications, microSD memory card is required when using the application.
- Some applications prohibit the product from entering sleep mode while they are active, or rapidly drain the battery while running in the background.

- 44

based upon the AVC Portfolio License for the individual use of

customers, and non-commercial use, and/or the licenses which decode (ii) VC-1 video. (this is restricted to the AVC video that

has been coded by customers who are not engaged in individual and commercial activities, and/or pertains to the provision of

licenses). For any other purposes, licence is not permitted even for the implied usage. Additional information may be obtained

standard compliant video (hereinafter stated as VC-1 video) based upon the VC-1 Patent Portfolio License for the individual

use of customers, and non-commercial use, and/or the licenses

video that has been coded by customers who are not engaged

in individual, and commercial activities, and/or pertains to the

provision of coded VC-1 video from video providers who have been granted the licenses). For any other purposes, licence is

not permitted even for the implied usage. Additional information

may be obtained from MPEG LA, LLC. Refer to http://www.

which decode (ii) VC-1 video. (this is restricted to the VC-1

from MPEG LA, LLC. Refer to http://www.mpegla.com This product has been granted the licenses which code (i) VC-1

coded AVC video from video providers who have been granted the

Operational procedures and screen appearances of the applications preinstalled in the product and those installed by you are subject to change without notice as a result of version upgrade. In addition operating procedures described in this manual may differ from the actual procedures.

Specific Absorption Rate (SAR) of Data Communication Devices

This model Qua tab PX data communication device complies with Japanese technical regulations and international guidelines regarding exposure to radio waves.

This data communication device was designed in observance of

Japanese technical regulations regarding exposure to radio waves* and limits to exposure to radio waves recommended by a set of equivalent international guidelines. These international guidelines vere set out by the International Commission on Non-Ionizing Radiation Protection (ICNIRP), which is in collaboration with the World Health Organization (WHO), and the permissible limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health condition.

The Japanese technical regulations and international guidelines

define the limits using a unit of measurement known as the Specific Absorption Rate (SAR), which represents the average amount of radio frequency energy absorbed by the human. The SAR limit for mobile devices is 2.0 W/kg. The highest SAR value for this data communication device when tested for use on the body is 0.323 W/kg*². There may be slight differences in SAR levels among individual products, but they all satisfy the limit.
The actual SAR of this data communication device while

communicating can be well below that indicated above. This is due to automatic changes in the power level of the data communication device to ensure it only outputs the minimum power required to communicate with a base station. Therefore in general, the closer you are to a base station, the lower the power output of the data communication device. Use this data communication device so that you can hold the

product at least 1.5 cm away from your body and also do no contain metal parts between the product and your body. By doing this, this data communication device complies with Japanese echnical regulations and international guidelines regarding exposure to radio waves.

- 45 -

The World Health Organization has stated that present scientific information does not indicate that use of mobile devices has any harmful effects on the human body. They recommend that if you are still worried about your exposure then you can limit your talk time or use a handsfree kit to keep the mobile phone away from your head

If you would like to know more detailed information, please refer to the WHO website. http://www.who.int/docstore/peh-emf/publications/facts press/

fact_english.htm
Please refer to the websites listed below if you would like to know

more detailed information regarding SAR.

OMinistry of Internal Affairs and Communications Website: http://www.tele.soumu.go.jp/e/sys/ele/index.htm

OAssociation of Radio Industries and Businesses Website: http://www.arib-emf.org/01denpa/denpa02-02.html (in

Oau Website:

and body.

http://www.au.kddi.com/ OLG Electronics Inc. Website

Refer to "Specifications" page of this product. http://www.lg.com/jp/mobile-phone (in Japanese only) (URL are subject to change without notice.) *1 Technical regulations are defined by the Ministerial Ordinance

- Related to Radio Law (Article 14-2 of Radio Equipment Regulations) *2 This value includes the wireless function available for
- simultaneous use

Export Administration Regulations

This product and its accessories may fall under the category of application of Japan Export Control Regulations ("Foreign Exchange and Foreign Trade Law' and relevant laws and regulations). U.S. Re export Regulations (Export Administration Regulations) is applied to this product and its accessories. If you export or re-export this product or its accessories, please follow the necessary procedures at your own risk and expense. For details on the procedures, contact the Ministry of Economy, Trade and Industry or the U.S. Department

- 47 -

Intellectual Property Right

Trademarks

All company names and product names in this manual are either trademarks or registered trademarks.



- Bluetooth® word mark and logos are registered **Bluetooth** trademarks owned by Bluetooth® SIG INC LG Electronics Inc. have the rights of using the above
- Wi-Fi[®], Wi-Fi Direct[®] are registered trademark of Wi-Fi Alliance[®].
- Google, the Google logo, Android, the Android logo, Google Play, the
- Google Play logo, Google Talk, Gmail are trademarks of Google, Inc. iWnn of OMRON SOFTWARE CO., Ltd. is used for conversion methods
- for Japanese language. iWnn© OMRON SOFTWARE Co., Ltd. 2008-2016 All Rights Reserved.
- · Twitter and Twitter logo are trademarks or registered of Twitter, Inc. FeliCa is a registered trademark of Sony Corporation.
- · Facebook and Facebook logo are trademarks or registered of
- Facebook, Inc. © 2014 Comic Communication Co., Ltd. All rights reserved.
- All other company names and product names are trademarks or
- registered trademarks of respective companies referred to in this

For inquiries, call: **Customer Service Center**

For general, charge, operations (toll free) From au cell phones:

SING ZERO WILL CONNECT YOU TO AN OPERATOR AFTER CALLING 157 ON YOUR au CELL PHONE For service canceling procedure in case of loss or theft (toll free)

6 0077-7-111 157 area code not requi

(113 area code not requir

n case above numbers are not available, 6 0120-977-033 (except Okinawa

Keitai Guarantee Service Center

For loss, theft or damage (toll free 0120-925-919

1120-977-699 (Okinawa)



OKINAWA CELLULAR TELEPHONE COMPAN' Manufactured by: LG Electronics Inc

やめましょう、 ▼ かめましょう、
歩きスマホ。