

Thank you for buying the "Qua tab QZ8" (simply called the "product" from here on). In this guide, settings and precautions for using the product are described. For explanations of basic functions, refer to "Basic Manual".

- Basic Operation**
Describes the basic operations.
- Initial Settings**
Make initial settings when you turn the power on for the first time.
- au Initial Setting**
Set au ID.
- au mail**
Make initial settings for au mail etc.
- Child Lock**
Set to use only one app to prevent a child from launching other apps mistakenly.
- Setting Display**
Set the screen brightness and back-light time of the screen.
- Setting Wi-Fi®**
Describes how to connect Wi-Fi® network.
- Viewing/Playing Data**
Describes how to view/play still images or video data.
- Battery Settings**
Describes how to save battery consumption, and how to increase battery life.
- Transferring data from au Settings Menu**
Describes how to restore/back up data from/to your previously used phone to/from this product using microSD card or the au server.

Company names and product names referred to in this manual are trademarks or registered trademarks of respective companies. The TM, ® marks may be omitted in this manual. Illustrations and screens shown in this manual may look different from the actual illustrations and screens. In some cases, minor details or a part of a screen may be omitted.

December 2017, 1st Edition
Sold by: KDDI CORPORATION
OKINAWA CELLULAR TELEPHONE COMPANY
Manufactured by: KYOCERA Corporation

Basic Operation

For explanations of basic functions, refer to "Basic Manual".

◀ Home screen (au Basic Home) ▶

Power button
The power button is on the top.
Turning the power on: Press and hold [Power button] until the notification light turns on.
Displaying home screen: From the Start screen, slide the screen.

[(Chrome)] Chrome icon
Use Google Chrome to view Web pages.

Navigation bar
 [BACK]: Return to the previous screen. When [check mark] appears in the character entry screen, tap this button to hide the keyboard or menu.
 [HOME]: Display the home screen. Long-touching this button activates Google.
 [RECENTS]: Show recently-used apps. Long-touching this button activates the multi-window during apps activation. When the multi-window activates, this button is changed to [multi-window icon]. Long-touching this button deactivates the multi-window.

Display
Touch directly with your finger to operate.

Tap/Double-tap
Lightly touch a screen and then immediately release your finger. Tapping a screen twice in the same position is called double-tap.

Long-touch
Keep touching an item, button, etc.

Slide
While lightly touching the screen, trace to the desired direction.

Flick
Touch the screen and flick up/down/left/right.

Drag
While lightly touching the screen, trace to the desired position.

Zoom-in/Zoom-out
While touching the screen with two fingers, move the fingers away and closer to each other.

Character entry
Use the software keyboard for entering characters. Tap the entry field in the character entry screen when registering contacts, creating mail, etc. to display the software keyboard. Tap a key to enter character.

Switching character input method
Character entry screen (12 keys layout) → long-touch "あ" → drag to the direction of "あ" → [Google Japanese Input Settings] → [Keyboard layout] → flick the keyboard to the left/right to select the desired character input method.

Flick input
Tap a key to display characters like the right screen that can be input by flick input. Flick to the direction of the character to enter.

- To enter same characters repeatedly when not in flick input mode, tap "▶" to shift to the right.

Displaying input candidates for flick input
To enter "B", flick to the left.
* To enter "A", release the finger.

Character entry mode switch key
Tap to switch character type.

Setting Do not disturb feature

- Slide down the status bar → [Total silence] / [Alarms only] / [Priority only] → set the auto cancelling time → [DONE] to enable the Do not disturb feature.
- Slide down the status bar when the Do not disturb feature is enabled → tap [Total silence] / [Alarms only] / [Priority only] to disable the feature.

Setting the App Permissions
The first time you launch an app/function that accesses the functions or information of the product, a confirmation screen for requesting access permission appears. If the confirmation screen appears, confirm the content and tap "DENY"/"ALLOW".

- If you do not permit, apps/function may not be activated or use of function may be restricted.
- For some apps/functions, an explanation screen for the permission appears. A confirmation screen may appear in several times and its content may vary. Confirm the content and follow the on-screen instructions.
- In this manual, description of such confirmation screen may be omitted.

Initial Settings

When you turn on the product for the first time after purchasing the product, follow the on-screen instructions to set language, functions and services.

Setting up Google account
Set up Google account to use Google apps such as "Gmail", "Play Store". Setting items are as below (besides the items below, register "First name" and "Last name").

User name	Register your Google account (user ID) and a character string for mail address. You can register a desired name, but a name already registered by another user cannot be set.
Password	Register password for the Google account.

- Tap "日本語 (日本)" to select "English" → "United States" → tap [LET'S GO]
- [Set up as new] * If you restore a backup or copy from a device, select [Copy your data] and follow the on-screen instructions.
- Set up the Wi-Fi® network to connect as required * If you do not set up, tap [Use cellular network for setup] → [CONTINUE]. * If you select [Don't use any network for setup] → [CONTINUE], the name input screen is displayed and enter your name, and then proceed to step 11. And follow the on-screen instructions.
- [More options] → [Create account] * If you have a Google account, enter a mail address or phone number → [NEXT].
- Enter "First name" and "Last name" → [NEXT] → Enter the date of birth and gender → [NEXT]
- Enter a user name → [NEXT] Checking registration of user name starts.
- Enter a password and reenter the password for confirmation → [NEXT]
- Confirm/Change the country name and phone number → [NEXT] → [VERIFY] * If you do not set up, tap "SKIP".
- Check the contents, then [I AGREE]
- Check the contents, then [NEXT]
- Select protection features → Follow the on-screen instructions to set security and notification * If you do not set up, tap [Not now] → [SKIP ANYWAY].
- Confirm the Google service settings, then [AGREE] → [NEXT]
- Set up other settings as required → [YES I'M IN] / [NO THANKS]
- Set up other settings as required → [ALL SET]
- Check the contents and mark the check box, then [NEXT] * If you do not set up, tap "NEXT".

*1 Text message for Google verification code will be sent to the set phone number.

au Initial Setting

By setting au ID, you can use various services provided by au such as "au Kantan Kessai" which allows you to purchase apps from the au スマートパス (au Smart Pass) or Google Play. Main setting items are as follows.

• If you skip the operation of "au Initial Setting" at the time of purchase, you can set au ID later. In that case, operate from the home screen → [基本機能 (Basic functions)] → [Settings] → [au Settings Menu] → [au Initial Setting]

- Check / Uncheck [Update] → [GET STARTED]
- [Sign in]¹
- Enter the security code² → [次へ (Next)]
- Enter the password → [同意して次へ (Agree)]
- [次へ (Next)]
- [次へ (Next)]
- [ALLOW]³
- Check apps to install⁴ → [Next]
- Check items to configure → [Next]
- [Finish]⁵


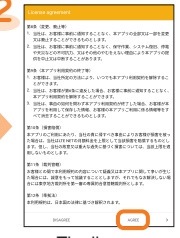
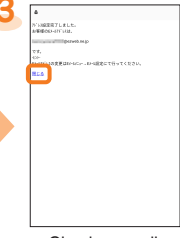
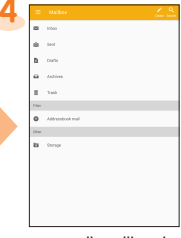
*1 If you registered au ID in the past, step 3 and 4 are not displayed. Go to step 5.
*2 The security code is a four-digit number written at subscription.
*3 A confirmation screen for requesting access permission will be displayed several times. In this case, do the same as step 7.
*4 When "Select apps" is displayed on "Backed up" field, tap to check the app.
*5 If you stored your data to au server using "Data Storage App", tap "Restore from backup now" to restore the data.

au mail


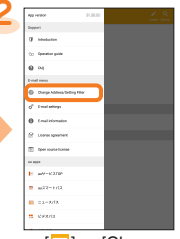
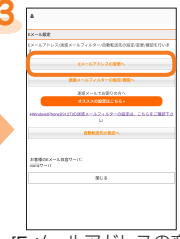
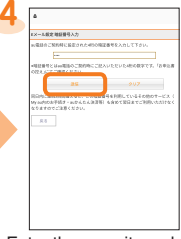
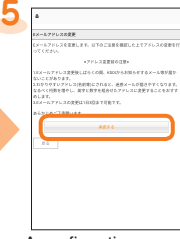
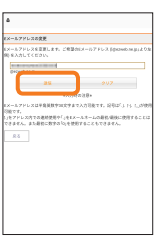

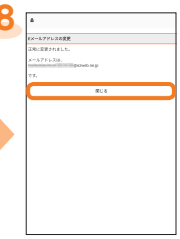
To use au mail, subscription to LTE NET is required. If you did not subscribe it when you purchased the product, contact an au shop or Customer Service Center. Your au mail address is determined automatically after initial setting. You can change the au mail address later.

Initial settings


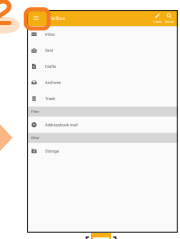
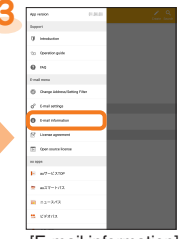
* You cannot make initial settings in Wi-Fi® communication.

-  Home screen → [au mail]
-  The license agreement of au mail app appears → check the contents, [AGREE] → follow the on-screen instructions to operate, and go next.
-  Check au mail address, and [閉じる (Close)]
* If a confirmation screen is displayed, follow the on-screen instructions.
-  au mail mailbox is displayed.

Changing your au mail address

-  Home screen → [au mail]
-  [Change Address/Setting Filter]
-  [E メールアドレスの変更へ (To Change E-mail address)]
-  Enter the security code → [送信 (Send)]
-  A confirmation screen for changing E-mail address appears → check the contents, then [承諾する (I accept)]
-  Enter au mail address → [送信 (Send)]
-  [OK]
-  [閉じる (Close)]

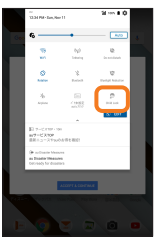
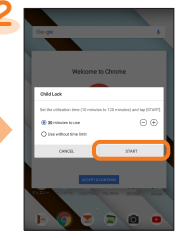
Checking your au mail address

-  Home screen → [au mail]
-  [E-mail information]
-  au mail address is displayed.


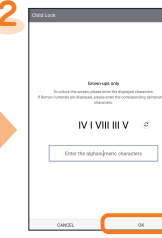
Child Lock

Set to use only one app to prevent a child from launching other apps mistakenly. In addition, set the utilization time to prevent excessive use for many hours.

Setting Child Lock

-  Launch an app to be pinned, slide down the status bar, and then the notification panel is displayed. → [Child Lock]
* When you launch the Child Lock for the first time, "How to use" is displayed. After reading it, close the Child Lock once, and repeat step 1.
-  Set the utilization time to turn on the Child Lock, and [START]
* When the utilization time is approaching, the product vibrates. When the utilization time is over, the product is locked automatically.

Canceling Child Lock

-  Long-touch [START] and [OK] simultaneously.
-  Enter the displayed characters, and [OK]
* When the "unlock screen for grown-ups" is set to OFF, the characters are not displayed.

Setting Display

Set the screen brightness and backlight time of the screen.

Adjusting the screen brightness level

-  Home screen → [基本機能 (Basic Function)] → [Settings]
-  [Display] → Slide the indicator of "Brightness level" left/right
* To make brighter, slide the indicator right. To make darker, slide the indicator left.

Increasing the backlight time of the screen

-  Home screen → [基本機能 (Basic Function)] → [Settings]
-  [Display] → [Sleep] → Select the lighting time
* When [Rollbahn Flap case] → set [Backlight auto extension] to [ON], the backlight time of the screen is extended automatically when the case is standing.

Setting Wi-Fi®

Use your home Wireless LAN (Wi-Fi®) or public wireless LAN to connect to the Internet. Main settings are as follows.


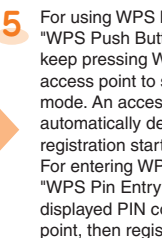
WPS system Use for registration of access point compatible with Wi-Fi Protected Setup™ with WPS mark.

* If you turn on wireless LAN (Wi-Fi®) function, battery consumption increases. You are recommended to turn wireless LAN (Wi-Fi®) function to OFF when not using wireless LAN (Wi-Fi®) function.

-  Home screen → [基本機能 (Basic Function)] → [Settings]
-  [Wi-Fi]
-  Turn "ON" and [ON]


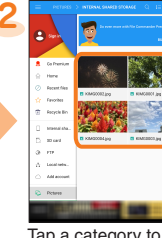
Available Wi-Fi® networks are listed. Select a Wi-Fi® network to connect → Enter a password as required → [CONNECT] to connect the Wi-Fi® network.
If a Wi-Fi® network you want to connect cannot be detected, tap "Add network" and connect the Wi-Fi® network manually.

Using WPS system access point

-  [Advanced] → [WPS Push Button] / [WPS Pin Entry]
-  For using WPS button, tap "WPS Push Button" and then keep pressing WPS button of access point to set to WPS mode. An access point is automatically detected and registration starts. For entering WPS PIN, tap "WPS Pin Entry" and enter displayed PIN code for access point, then registration starts.

Viewing/Playing Data

By transferring data from the previously used au phone to a microSD™ memory card, you can insert the microSD memory card into this product and view/play still image or movie data using "File Commander" in the product. When you activate for the first time, the Terms and Conditions appears. Follow the on-screen instructions.


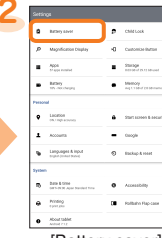

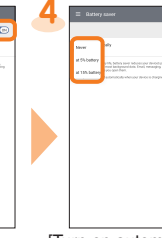
-  Home screen → [基本機能 (Basic Function)] → [File Commander] → [CONTINUE] → [CONTINUE WITH ADS]
-  Tap a category to be displayed → Tap a file → Tap data
Data is viewed/played.

* Copyrighted data on the previously used au phone cannot be transferred to the product. However, some Chaku Uta Full®, Video Clip, Chaku Uta Full Plus® may be able to be transferred and played on the product with the same phone number by backing up with LISMO Port Ver 4.2 or later.

Battery Settings

Setting Battery saver

Control operations by vibrator, location information service, etc. to save battery consumption.

-  Home screen → [基本機能 (Basic Function)] → [Settings]
-  [Battery saver]
-  Set to "ON"
-  [Turn on automatically] → [Never] / [at 5% battery] / [at 15% battery]

Setting Battery care mode


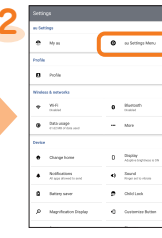
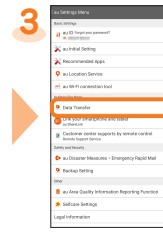

Battery life is extended by not fully charged.

-  Home screen → [基本機能 (Basic Function)] → [Settings]
-  [Battery] → [Battery care mode]
-  Set to "ON"

Transferring data from au Settings Menu

Restore/back up data from/to your previously used au phone to/from this product using a microSD memory card or the au server.

- To restore data using the au server, store the data from the old au phone to the au server beforehand. Setting au ID is required for using the au server (If the old au phone does not have au Settings Menu, use auCloud app).
- For restoring data using a microSD memory card, save the data to the microSD memory card using the old au phone in advance (If the old au phone does not have au Settings Menu, use au backup app).

-  Home screen → [基本機能 (Basic Function)] → [Settings]
-  [au Settings Menu]
-  [Data Transfer]
-  Tap "機種変更はこちら (For model replacement)" and transfer data according to the guidance on the screen.

Using "Data Storage App"

To use "Data Storage App" to back up photos, etc. to the au server automatically, set as follows.

Home screen → [基本機能 (Basic Function)] → [Settings] → [au Settings Menu] → [Backup Setting] → Select a data type to back up automatically