XPERIA Z4 Tablet SOT31

Basic Manual

Getting Ready

Names and functions of parts



- Xperia[™] Z4 Tabletのご利用にあたっての注意事項 (Cautions on using) Xperia[™] Z4 Tablet) (Japanese)
- ・設定ガイド (Setting Guide) (Japanese)
- *1 Including warranty

The following items are not included in the package Desktop holder

- microSD memory card

 - microUSB cable

1 Headset connection terminal

2 microSD memory card/au Nano IC Card 04 LE slot

- TV antenna
- ® Power key/Screen lock key
- 6 Volume key/Zoom key
- Tight sensor: Auto-adjust the screen brightness
- 9 Display (Touch panel)
- Notification LED
- 1 Speaker*
- GPS/Built-in antenna*
- 19 Wi-Fi® antenna*2
- 15 au Nano IC Card 04 LE
- 16 Wi-Fi®/Bluetooth®/antenna part*2
- 20 Back cover*
- (21) Built-in antenna*2
- 1 Do not jab with a sharp object such as a needle. Doing so may
- *2 The antenna is built in. Covering around the antenna by the hand may affect the quality of communication.
- *3 Do not remove the nameplate with stickers of CF mark, FCC ID and IMEI information printed.
- *4 Back cover is not removable. Removing so forcibly might cause damage or a fault. Also, battery is built into the main unit and

$\boldsymbol{3}\,$ When charging is complete, remove the microUSB plug of

4 Remove Common AC Adapter 05 (sold separately) from

Turning on (Initial settings)

Turning the power on

1 (b) (over 1 sec)

appears.

onscreen instructions to set the initial settings

2 Swipe (flick) the screen up

■ Turning the power off

- 1 ((over 1 sec)

♦Information

this manual.

procedures.

IC Card 04 LE.

Purchase a specified charger (sold separately).

Handles only basic operations for main features.

For detailed descriptions on various functions, refer to the

扱説明書 (詳細版) (Full Instruction Manual) (Japanese)"

http://www.au.kddi.com/support/mobile/quide/manual/

Company names and product names referred to in this

manual are trademarks or registered trademarks of

app on the product to confirm detailed operational

screens on which their operations are described.

instructions to download and install app.

au Nano IC Card 04 LE

sure to turn off the product.

the tray from the main unit

From the Home screen, [●]▶[お客さまサポート (Customer support)]▶[Basic Manual] (Japanese)

Certain functions can be directly activated from the app

When you activate for the first time, follow the onscreen

Your phone number etc. is recorded in the au Nano IC Card 04 LE.

You cannot use the product with an IC card other than au Nano

au Nano IC Card 04 LE

Attaching/removing the au Nano IC Card 04 LE

Before attaching/removing the miroSD memory card, make

1 Open the microSD memory card/au Nano IC Card 04 LE

2 Push-in the tray (1), and when the edge of the tray

slot cover while hooking the groove with your fingernail

pops-out a little, pull it out straight (2), then remove

■ Attaching the au Nano IC Card 04 LE

The product is compatible only with au Nano IC Card 04 LE.

"Basic Manual" (Japanese) app installed on the product or "取

respective companies. The TM, ® marks may be omitted in

This product allows you to use the "Basic Manual" (Japanese)

Illustrations used in this manual are just images for explanations

. The battery is built into the product.

They may be different from actual ones.


About Operating Instructions

■ "Basic Manual" (Japanese) app

■ Basic Manual (this manual)

available on the au homepage.

after it vibrates three times

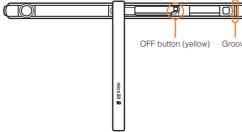

- needle may cause malfunction.
- Alternatively, press and hold (6) and upper part of the volume key at the same time for approximately three

For details, refer to "Setting Guide"

♦Information

• To change the language later, from the Home screen, [▶[設定 (Settings)]▶[言語と入力 (Language & input)]▶[地域 言語 (Language)]. To make settings, from the Home screen, [圖]▶[Settings]▶[Setup guide]. To make settings for au service etc., from the Home screen, [:::]▶[Settings] ▶[au Settings Menu]▶[au Easy Setting].

Setting Screen lock

the keys and touch panel from false operations. When the specified time elapses, the product's screen backlight turns off automatically and screen lock is activated.

1 While the screen is displayed, (6)

Unlocking screen

The lock screen appears when turning the power on or the backlight on by pressing (6)

1 Swipe (flick) the screen up on the lock screen **♦Information**

1 From the Home screen, [⊞]▶[お客さまサポート (Customer support)]▶[au災害対策 (au Disaster Countermeasure)] au災害対策 (au Disaster Countermeasure) menu appears. An agreement screen regarding the use or an initial setting screen appears for the first time you activate this program

Follow the onscreen instructions. ■ Using 災害用伝言板 (Disaster Message Board) Disaster Message Board service enables you to register information of well-being from an area of distress via LTE NET in case of large-scale

disaster such as earthquake with a seismic intensity of over 6 lower. 1 au災害対策 (au Disaster Countermeasure) menu▶「災害

用伝言板 (Disaster Message Board)]

♦Information

· To register information of well-being, E-mail address (~ezweb.ne.jp) is required. Set up E-mail address beforehand

■ Using 緊急速報メール (Emergency Rapid Mail) Emergency Rapid Mail is a service that distributes Earthquake Early Warning or Tsunami Warning delivered from the meteorological bureau or Disaster and Evacuation Information delivered from the government or local public organization to all au devices in specified areas simultaneously. When you receive Earthquake Early Warning, ensure your safety and take proper action according to the situation around you. When you receive a Tsunami Warning, draw away from sea coast immediately and evacuate to safe place such as upland or well-built high building.

1 au災害対策 (au Disaster Countermeasure) menu▶[緊急 速報メール (Emergency Rapid Mail)]

4 Close the microSD memory card/au Nano IC Card 04 LE slot cover, press it firmly to ensure that there are no gaps between the cover and the main unit

Removing au Nano IC Card 04 LE

- 1 Open the cover while hooking the groove of microSD memory card/au Nano IC Card 04 LE slot cover with your fingernai
- 2 Push-in the tray, and when the edge of the tray pops-out a little, pull it out straight, then remove the tray from the main unit
- 3 Remove au Nano IC Card 04 LE out of the tray, insert the tray into the main unit and then press it all the way until it clicks

Pay attention to the direction of pushing the tray.

4 Close the microSD memory card/au Nano IC Card 04 LE slot cover, press it firmly to ensure that there are no gaps between the cover and the main unit

- Note the following points, otherwise handling the au Nano IC Card 04 LE may cause malfunction or damage.
- · Do not touch the IC (metal) part of the au Nano IC Card 04 LE. Insert in the correct direction.
- · Do not use force to attach or remove
- Do not lose the au Nano IC Card 04 LE after it has been
- · Do not insert au Nano IC Card 04 LE with conversion adapter attached. Doing so may cause a fault.

Basic Operation

keys located at the bottom of the screen



	Return to the previous screen. Close a dialog box, menu, or the Notifications panel.
	Display the Home screen. Long-touch and drag it to " "Google" app.
Recently	Display recently used apps on a list and activate or end them from the list. Also, you can use small apps.

Using the touch panel

The display of the product is a touch panel operated by touching it with your finger.

■ Tap/Double-tap

Tap: Gently touch a screen and then immediately release your

- Reception of Emergency Rapid Mail is notified by a special warning tone and vibration. It is not possible to change the warning tone. Earthquake Early Warning is notified by warning tone and voice
- sound ("地震です" (It is an earthquake)), and vibration Earthquake Early Warning may not arrive before strong tremors in areas near the epicenter.
- Tsunami Warning is a major tidal wave/seismic sea wave notification delivered from the meteorological bureau to the area including target coast.
- Disaster and Evacuation Information is a service that distributes bulletins concerning residents' safety including evacuation advisories, evacuation orders and other warnings issued by the national and local governments.
- The service is available only in Japan (it cannot be used overseas)
- No information fee or communication charge is required for receiving Emergency Rapid Mail.
- KDDI is not liable for damages suffered by customers resulting from the service's information, lack or delay in the information caused by transmission or system breakdowns, or other events that are outside the responsibility of KDDI.
- · Refer to the Japan Meteorological Agency web page for details about distribution of Earthquake Early Warning.

http://www.jma.go.jp/ You cannot receive Emergency Rapid Mail when your cell

4

- phone is turned off. Emergency Rapid Mail may not be received if you are in a
- place where signal does not reach even in the service area (e.g. in a tunnel, basement) or in a place with a poor
- You cannot receive the Emergency Rapid Mail that the reception is failed.

Messaging Service) Disaster Voice Messaging Service is a service which allows

you want to inform your well-being in case of a large-scale

音声お届けサービス (Disaster Voice Messaging Service)]

Warning arrives may vary.

- Voice message can be recorded for up to 30 seconds.
- · Voice messages cannot be saved or played if the product does not have available memory.
- Using 災害関連情報 (Disaster related information)

1 au災害対策 (au Disaster Countermeasure) menu▶「災害関


連情報 (Disaster related information)]▶Follow the onscreen instructions



Attaching/Removing microSD memory card

Attaching microSD memory card 1 Open the microSD memory card/au Nano IC Card 04 LE

- slot cover while hooking the groove with your fingernail 2 Check the orientation of microSD memory card, slowly
- insert it straight until it clicks Face the terminal side of microSD card up and insert it.

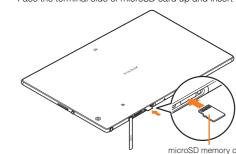

3 Close the microSD memory card/au Nano IC Card 04 LE slot cover, press it firmly to ensure that there are no gaps between the cover and the main unit

♦Information

■ Long-touch

Flick (swipe)

up/down or left/right.

Slide

Pinch

Drag

to move.

• Insert a microSD memory card in the appropriate direction. Inserting a microSD memory card forcefully into the slot could result in failure to remove the microSD memory card

While your finger is gently touching the screen, trace it to the

Operate the screen by quickly moving (flicking) your finger

Touch the screen with two fingers and widen (pinch-out) or

Keep touching an item or icon, trace it to the desired direction

· Do not touch the terminal of the microSD memory card.

Keep touching an item with your finger.

narrow (pinch-in) the fingers' distance.

desired direction to move over.



Home screen

Home screen consists of multiple screens. Slide or flick left or right to move to the adjacent screen. Tap (to return to the Home screen any time.



Widgets

3 Wallpapers

4 Shortcuts (Apps) (5) Home screen position

Indicates which screen of the several Home screens you

⑥ Folders (Google, 基本機能 (Basic functions))

Preface Thank you for buying "Xperia™ Z4 Tablet" (simply called the

Before using the product, read "Basic Manual" (this manual) and "取扱説明書 (詳細版) (Full Instruction Manual)" Japanese) to ensure safe use and handling.

Packaged items

Before your start using the product, make sure that you have all the following packaged with the product



• 取扱説明書 (Instruction Manual) (Japanese

- AC adapter


- 3 Microphone*
- Front camera
- 12 microUSB connection terminal
- (17) Camera lens
- 18 N mark (19) Nameplate

- not removable by customers

• It may take longer to complete for charging while using the

Charging with Common AC Adapter 05 (sold separately) is

camera function. ■ Charging with the AC Adapter

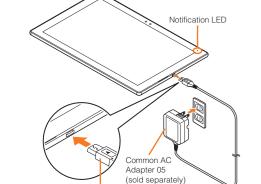

1 Insert the microUSB plug of Common AC Adapter 05 (sold separately), with the engraved side (▲) facing up, straight nto the microUSB connection terminal of the product 2 Insert the power plug of Common AC Adapter 05 (sold

separately) into an outlet

Notification LED lights on the product.

Common AC Adapter 05 (sold separately) from the product

The product vibrates and after a while the lock screen

When you turn on the product for the first time, follow the

2 [Power off]

• Press (®) (over 1 sec) ▶ Long-touch "Power off" ▶ [OK] to restart the product in safe mode (a function that enables to start the product in a status equivalent to the status at the time of purchase)

Force-quitting

1 Open the microSD memory card/au Nano IC Card 04 LE slot cover while hooking the groove with your fingernail. press the OFF button (YELLOW) with a fine-tipped object for approximately three seconds, and release your finger

OFF button (yellow) Groove

- Pressing the OFF button (yellow) by a sharp object such as
- seconds, and release your finger after it vibrates three times.

Initial settings

When you turn on the product for the first time, follow the onscreen instructions to set language, functions, service, etc.

For Those Requiring an English Instruction Manual

You can download the English version of the instruction

one month after the product is released).

• In this manual, keys (key icons) are re

part of a screen may be omitted.

following companies:

TELEPHONE COMPANY

災害関連情報 (Disaster related information).

Download URL:

manual from the au homepage (available in approximately

http://www.au.kddi.com/support/mobile/guide/manual/

Regarding notations used in this document

simplified illustrations such as \(\bigcirc\), \(\bigcirc\), \(\bigcirc\), \(\bigcirc\)

screen etc. are indicated as [(name of the item etc.)].

In this manual "microSD™ memory card" "microSDHC"

memory card" and "microSDXC™ memory card" are

abbreviated as "microSD memory card" or "microSD".

• "The Company" as appears in the manual refers to the

Sold by: KDDI CORPORATION, OKINAWA CELLULAR

Using au 災害対策 (au Disaster Countermeasure)

fou can use 災害用伝言板 (Disaster Message Board) service, 緊

急速報メール (Emergency Rapid Mail) service that distributes 緊

急地震速報 (Farthquake Farly Warning). 災害·避難情報 (Disaste

and Evacuation Information) and 津波警報 (Tsunami Warning), 災

害用音声お届けサービス (Disaster Voice Messaging Service), and

3 Set au Nano IC Card 04 LE into the tray with IC (metal)

main unit and press it all the way until it clicks

part facing up (6), insert the tray with the card into the

Pay attention to the orientation of the notch and pressing tray.

Manufactured by: Sony Mobile Communications Inc.

· Operations of tapping menu items/icons/buttons on the

Screen illustrations shown in this manual may look different

from the actual screens. In some cases, minor details or a

All of the indicated amounts exclude tax unless otherwise specified.

When the screen lock is set, the backlight turns off to avoid

• On the lock screen, swipe " to activate "Camera" app.

Key icons

The followings are the main functions of \square , \square

Return to the previous screen. Close a dialog box, menu, or the Notifications panel.
Display the Home screen. Long-touch and drag it to " "Google" app.

Double tap: Touch the same position twice

Flick (Swipe)

Pinch

may be received. ■ Using 災害用音声お届けサービス (Disaster Voice

This delivery system is different from Earthquake Early

Warning provided through TV, radio, or other communication

procedures, which means that the time the Earthquake Early

• Information from someplace other than your current location

you to record your voice using au device and send someone

1 au災害対策 (au Disaster Countermeasure) menu▶[災害用

♦Information

To use Wi-Fi[®], initial settings via 4G (LTE/WiMAX 2+) network

You can check history of Disaster and Evacuation Information delivered by local government, disaster related information

■ Removing microSD memory card

reading/writing) before removing.

▶[Unmount SD card]▶[OK]

appears in the status bar.



Be sure to unmount microSD memory card (to disable





slot cover, press it firmly to ensure that there are no

2 Open the microSD memory card/au Nano IC Card 04 LE

slot cover while hooking the groove with your finger

Charging

When you purchase your product, the internal battery is not fully charged. Charge the battery before use.

gaps between the cover and the main unit

• When the charging starts, notification LED lights according to the battery level. To check the battery level, see the status bar in the top of the Home screen. Alternatively, from the Home screen.

 When you start charging with the product powered off, the power turns on even though operation is not available. Follow the instructions of each airline or medical facility for the use of cell phones on their premises.











1 Google Search

are in

7 Apps key

1 13

Set auto rotation of the Home

21

28

creen or size of icons.

add/delete/move shortcuts of apps, widgets, folders, etc. on

1 Long-touch an area of the Home screen where no icons are displayed

Alternatively, pinch-in on the Home screen.

Widgets & Apps		Add shortcuts of widgets or apps.	
Wallpapers	Album	Select an image from albums to set as a wallpaper. To set image range, adjust cropping area by dragging, etc.	
	Live Wallpapers	Select a content from albums to set as a wallpaper.	
	Photos	Select an image from photos to set as a wallpaper.	
	(Xperia [™] 's Wallpaper)	Select an image to set as a wallpaper. Images displayed below "Photos"/"Live Wallpapers" are "Xperia™'s Wallpaper".	
Themes	•	Set the wallpapers etc. for the Home screen or the lock	

Iome Settings

- Tap " Tap at the bottom of the screen to hide the software
- Switch between lower-case " , upper-case " and
- caps " on QWERTY keyboard When using QWERTY keyboard, touch and hold a character
- to select a character variant. • To change to the other language keyboard, tap wand
- select [Google voice typing]/[Chinese keyboard]/[Xperia™ Japanese keyboard]

Adding a folder

- 1 From the Home screen, long-touch an icon
- 2 Drag the icon onto another icon
- Deleting shortcuts/widgets/folders
- 1 From the Home screen, long-touch an icon or a folder you want to delete
- 2 Drag the icon or the folder to "Remove" displayed in the top of screen To delete a folder, then tap "DELETE". It also deletes
- shortcuts etc. in the folder.

• Long-touch a shortcut, widget, or folder icon to move.

Using the Apps screen

You can call up functions from the Apps screen. App icons installed to the product are also displayed

- Starting an app
- Slide or flick left or right to switch the Apps screen
- 2 Tap an app to use

Support

Troubleshooting

Introduction of related accessories

For details, refer to the instruction manual for each device. · Sony Mobile TV antenna input microUSB conversion cable 01(01SOHKA) (sold separately)

- Sony Mobile AC adapter 05 (EP880) (sold separately) · Common AC Adapter 05 (0501PWA) (sold separately)
- microUSB cable 01 (0301HVA) (sold separately) microUSB cable 01 Navy (0301HBA) (sold separately)
- microUSB cable 01 Green (0301HGA) (sold separately) microUSB cable 01 Pink (0301HPA) (sold separately) microUSB cable 01 Blue (0301HLA) (sold separately)

- · For the latest information on accessories, visit the au homepage (http://www.au.kddi.com/) or contact the Customer Service
- · Accessories described above can be purchased from the au Online Shop. Some accessories may not be purchased due to the availability

An after-sales service membership program on a monthly

basis called "Keitai Guarantee Service Plus LTE" (monthly fee:

380 yen tax excluded) is available for using your au device for

details of this service, refer to au homepage or contact Keitai

• Once you cancel the membership, you cannot reapply for it

When an au device is handed over to you or someone else

the Keitai Guarantee Service Plus LTE membership is also

• When you get a new au device by changing the model or

Service contents are subject to change without notice

purchasing an extra cell phone, the "Keitai Guarantee Service

Plus"/"Keitai Guarantee Service Plus LTE" membership for the

cell phone, this service only covers the most recently

handed over to the successor of the cell phone.

old au device is automatically canceled

a long time without worries. This service expands coverage

for many troubles including malfunction, theft and loss. For

· You can apply for membership only at the time of

until you purchase an au device next time.

http://auonlineshop.kddi.com/

Guarantee Service Center

purchased au device.

an au shop or PiPit.

purchasing your au device.

Before you assume that the product is malfunctioning, check

Symptom	What you should check
Power is not turned	Is the internal battery charged?
on even though (b) is pressed	Is (b) pressed for over 1 second?
The power goes off	Is the internal battery charged?
The power turns off while activation screen is displayed	Is the internal battery charged?
The screen freezes and the power cannot be turned off	Open the microSD memory card/au Nano IC Card 04 LE slot cover while hooking the groove with your fingernail, press the OFF button (yellow) with a fine-tipped object for approximately three seconds▶ release your finger after it vibrates three times. Alternatively, press and hold ⊚ and upper part of volume key at the same time for approximately three seconds, and release your finger after it vibrates three times.
(Out of service area) appears	Is the product out of the service area or in an area where the signal is weak? Is the built-in antenna covered with
	hand? Is au Nano IC Card 04 LE inserted?

■ Keitai Guarantee Service Plus LTE ■ After-sales service

35

contact the following service contact. Customer Service Center (for service canceling procedure

in case of loss or theft) From a land-line phone, Free cut 0077-7-113 (toll free)

From an au mobile phone, 113 without area code (toll free) Business hours: 24 hours live support

Keitai Guarantee Service Center (for loss, theft, damage)

0120-925-919 (toll free)

Note that when changing the model or purchasing an extra

Reception only from PC or smartphone https://cs.kddi.com/support/n_login.html



- The App for the Internet acceptance, if "damage", "wet", "theft" and "loss" are eligible. In the case of spontaneous failure (not the cause damage, such as water wet, but does not power on, the screen does not function or other), it will

au Nano IC Card 04 LE The au Nano IC Card 04 LE is lent to you by au. In case of loss or damage, the card will be replaced at your expense. When a malfunction is suspected, or in case of theft or loss, contact

If you are unsure about anything regarding after-sales service,

From a land-line phone/From an au cell phone,

Business hours 9:00 - 21:00 (7 days a week)

Online Repair Desk (24 hours a day over the Internet)

- be accepted by phone for interview is required. To apply for the Internet, you need the e-mail address

Symptom	What you should check
Power is not turned	Is the internal battery charged?
on even though (b) is pressed	Is @ pressed for over 1 second?
The power goes off	Is the internal battery charged?
The power turns off while activation screen is displayed	Is the internal battery charged?
The screen freezes and the power cannot be turned off	Open the microSD memory card/au Nano IC Card 04 LE slot cover while hooking the groove with your fingernail, press the OFF button (yellow) with a fine-tipped object for approximately three seconds▶ release your finger after it vibrates three times. Alternatively, press and hold ⊚ and upper part of volume key at the same time for approximately three seconds, and release your finger after it vibrates three times.
(Out of service area) appears	Is the product out of the service area or in an area where the signal is weak? Is the built-in antenna covered with hand?
	Is au Nano IC Card 04 LE inserted?

au after-sales service information

A message such as

Replacement cell phone delivery service Keitai Guarantee Service Plus LTF members

	2
Spontaneous failure 1st year	Free of charge
Spontaneous failure 2nd	
year or later	Customer charge
	1st: 5,000 yen 2nd: 8,000 yen

Non-Keitai Guarantee Service Plus LTE members

Spontaneous failure 1st year	
Spontaneous failure 2nd year or later	No recompense
Partially damage, water soak, irreparable damage, theft or loss	no recompense

Holding over and repair

rvice Plus LTF members

3 LIL IIIGIIDGI3
Free of charge
Free of charge (three-year warranty)
Customer charge Upper limit: 5,000 yen
Customer charge 10,000 yen
No recompense

Non Koitai Cuarantaa Carvina Dlug ITE mamba

	Non-Keitai Guarantee Servic	e Plus LIE members
	Spontaneous failure 1st year	Free of charge
٦	Spontaneous failure 2nd year or later	
٦	Partially damage	Actual cost
	Water soak, irreparable damage	
	Theft, loss	No recompense (model change)

*1 Two types of network, "LTE"/"WiMAX 2+" can be used. "4G"

If any notification icons are displayed, slide down the status

bar to open the Notification panel. You can check details of

• To delete a notification, flick the notification left or right.

· Some notifications may not be deleted depending on the content.

You can check notifications on the lock screen. Or set to

Notification LED informs charging prompt, battery level while

attery level is 14% or lower.

attery level is 90% or higher

attery level is 15% - 89%.

*1 Notification LED flashes while backlight is turned off.

The display is dark | Is "Brightness level" set to dark?

v sticker

Screen response is When a large amount of data is saved

Cannot recognize a Is the microSD memory card inserted

For more details, visit au Customer Support site of au homepage

You can update the product to the most recent software for

You are charged for data communications when connecting to

the Internet from the product by using packet communication.

optimal performance and to get the latest enhancements

· You are recommended to back up your data before

properly?

slow when you tap in the product or transferring large-

Description

The battery is charging when the remaining

The battery is charging when the remaining

The battery is charging when the remaining

The remaining battery level is 14% or lower.

What you should check

s the light sensor blocked or covered

ize data between the product and

icroSD memory card, the screen

Is the microSD memory card unmounted

sponse may be delayed.

s set "Sleep" period too short'

Indicates new Gmail message, new SMS

charging, new mails, etc. by turning on or flashing.

The company determines which network is less busy

depending on the condition of the line to connect.

appears on the screen for both networks.

notification icons or start corresponding apps.

hide notifications on the lock screen

message.

■ Notification panel

Status

Flashing

Flashing

Symptom

backlight turns off

on the screen/pres

microSD memory

http://www.au.kddi.com/support/i

Updating Software

updating software.

he keys

n a short while

The screen

' Charge amounts are all tax excluded

Replacement cell phone delivery service

- device (same model, same color) is delivered by calling to. Return your damaged device within 14 days after the replacement device is delivered.
- and if you use, it will be the 2nd. * For details, refer to au homepage

Holding over and repair

- Damages and malfunctions intentionally caused by the customer as well as those due to modification (e.g. disassembly, change of parts, painting, etc.) by the
- · You cannot receive a refund for the replacement of the outer casing due to stains, scratches, paint removal, etc. on the outer casing.

♦Information

• When the remaining battery is not sufficient for turning the

product ON, pressing @ makes LED flash red three times. • When you start charging with the product powered off. the notification LED turns in red. When the status of battery appears on the display, however, the notification LED lights in color that indicates the battery level.

■ Checking own phone number

1 From the Home screen, [□] ► [Settings]

2 [About tablet]▶[Status]

The phone number of the product is shown under "My phone number (MDN)".

♦Information

 Alternatively, from the Home screen, [□] ►[Contacts]► [Myself] to check your phone numb

■ Setting the silent mode (with vibration)

1 Press the volume up key or down key

2 [[]]

25

The icon for the volume adjusting bar changes to In and the silent mode (with vibration) is set Tap " to cancel the silent mode (with vibration).

• For details, visit http://www.sonymobile.co.jp/support/ or

"取扱説明書(詳細版)(Full instruction manual)"(Japanese)

Update files can be downloaded from the Internet web site

• Note that when Wi-Fi® communication becomes unstable,

packet communication takes the place automatically, which

1 From the Home screen, [⊕]▶[Settings]▶[About tablet]

refer to the "Basic Manual" (Japanese) app or

■ Downloading and updating software

For repair, contact Keitai Guarantee Service Center

During the Repairs will be done based on the terms of

described on the warranty card.

The product supports SIM unlock. By unlocking SIM lock, you

• The SIM unlock service is provided at the au homepage and

• Some services, functions, etc. may be unavailable when using

Approx. 10.1 inches

2,560 x 1,600 dots

Approx. 920 hours

sold separately):

Approx. 190 min.

Approx. 10 hours 00 mir

atterv)

.1 mm

FRILUMINOS® Display for mobile

Approx. 16.77 million colors

Approx. 393 g (with internal

Approx. 254 mm x 167 mm x

Jsing Common AC Adapter 05

39

non-au SIM card. The Company is not liable for any

• For details, refer to the au homepage

For SIM unlock, operate from the Home screen, [■]▶

[Settings]▶[About tablet]▶[Status]▶[SIM card status].

Outside the We shall repair the product for a charge as

services of the free-of-charge repair warranty

requested by the customer if repair renders it

available on au homepage

may apply communication fee

into the product directly

▶[Software update]

After-sales service

When asking for repair

ısable.

2 [II]▶[Refresh]

warrantv

arrantv

SIM unlock

au shops

operations.

can use non-au SIM cards

Main specifications

Continuous stand-by

Continuous Full Seq

Charging time

neriod

period

32

■ Setting the silent mode (without vibration)

1 Press the volume down key for over 1second

The icon on the volume adjusting bar changes to 🌆 and 1 Tap a character input box the silent mode (without vibration) is set QWERTY keyboard appears 2 Tap [] to display Numeric keypad

♦Information

26

- Before handing in the product for repair, make a backup of the contents of memory since they may disappear during repair. Note that the Company shall not be liable for any damages and loss of income should the contents of memory be altered or lost.
- Recycled parts that meet the Company's quality standards are sometimes used for repair. • Collected au device by Replacement cell phone delivery
- service which you used before are recycled to device for replacement after repairs. Also replaced parts by au aftersales service are collected and recycled by KDDI. They are not returned to customers.
- The product which is processed, remodeled, analyzed (including by modifying or analyzing the software (including by rooting etc.), reverse engineering, decompiling), or repaired by an unauthorized repair office is not covered by the warranty and repair may be refused.

■ Performance parts for repair

The Company retains performance parts for repair of the Xperia[™] Z4 Tablet main unit and its peripherals for four years after discontinuation of production. "Performance parts for repair" refers to parts required for maintaining the functions of the product.

■ Warranty card

At the store of purchase, thoroughly check and read the name of the retailer, date of purchase and other necessary details filled in on the warranty card, and be sure to keep it in a safe

33

Continuous 1Sea Approx. 11 hours 30 min.

Continuous tethering	Approx. 920 min.
time	
Wi-Fi® tethering	10
maximum connection	
number	

• The continuous stand-by time, continuous Full Seg watching time, continuous 1Seg viewing time and continuous tethering time may drop to less than half depending on the battery charging status, usage environment such as temperature, reception condition at the location where the product is used, and the function settings.

♦Information







stores bearing the @logo rega

For inquiries, call: Customer Service Center

Business hours 9:00-20:00 (7 days a week)

For loss or theft (toll free)

Business hours: 24 hours live supp

From fixed-line phones: | From au cell phones

From fixed-line phones: | From au cell phones

0120-977-033 (except Okinawa)

Keitai Guarantee Service Center

Business hours 9:00-21:00 (7 days a week)

0120-977-699 (Okinawa)

For loss, theft, damage.

H 0120-925-919 (toll free)

0077-7-113 113 without area code

0077-7-111 157 without area code


AFTER CALLING 157 ON YOUR au CELLPHONE

For general information, charges and operation information (toll free)

PRESSING ZERO WILL CONNECT YOU TO AN OPERATOR

In case above numbers are not available (toll free).

キケン! 水ぬれ充電

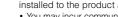

• You may incur communication charges depending on the

1 From the Home screen, [

Some apps are stored in a folder.

■ Main apps

Contacts

Settings

Calendar

details, refer to "Setting Guide"

■ Deleting (uninstalling) apps

Downloading apps

-mail. SMS

Some apps may not be deleted.

You can download and install apps or games, etc. by using Google

• To use Google Play, you need to set a Google account. For

Before deleting installed apps, back up contents related to

the app that you want to save including data saved in the app.

Play Store

Camera, Album

Maps

g , Google, Voice

Basic Manual

The status bar is located at the top of the product screen. On the left of the status bar, notification icons appear to inform new mails. operations in progress, etc., and on the right, status icons appear to indicate the status of the product.

Examples of notification icon

■ Status bar

Knowing the status of the product

New Gmail message ■ Notification LED

\succeq	New PC mail message
\sum_{i}	New E-mail (@ezweb.ne.jp) message
265	New SMS
ψ	USB connecting
7	Wi-Fi [®] open network available

■ Main status icons

4G (LTE/WiMAX 2+) data communication status*1 (Available, data transferring or downloading) 100, 1973 Battery level (100%, Charging) Silent mode (with vibration) is set Silent mode (without vibration) is set Airplane mode is activated NiFi®connected, Wi-Fi®communicating	1 , 2	Signal level (Level 4, Out of service area)	
Silent mode (with vibration) is set Silent mode (without vibration) is set Airplane mode is activated	* 11 , * 11	status*1 (Available, data transferring or	
Silent mode (without vibration) is set Airplane mode is activated	[100], * [97%]	Battery level (100%, Charging)	
Airplane mode is activated	4_1	Silent mode (with vibration) is set	
	∢ ×	Silent mode (without vibration) is set	
Wi-Fi [®] connected, Wi-Fi [®] communicating		Airplane mode is activated	
	? ,	Wi-Fi [®] connected, Wi-Fi [®] communicating	

24 Symptom What you should check s the specified charging equipment

Cannot charge the attery (Notification sold separately) attached properly? LED does not light, the battery icon does not change

into charging one) Cannot operate key/ Is the power turned on? ouch panel s "Screen lock" set? Turn off the power and then turn it on

Cannot operate Are you operating with gloved hand? touch panel as Are you operating with a fingernail or reign object on the operating Charging is not s the temperature of the product ised or very low?

"charge the battery Battery usage time Is the battery fully charged? Charge until the notification LED turn

The battery is almost dead

Is the internal battery end-of-life? Is the product used for a long period at places where (Out of service area) appears?

(1)

37

• When you have trouble with your au device, replacement

 Available up to twice in a year from the day you use this service as a start day. If you do not use this service in the past year for the subscription to this service, it will be 1st

- customer are not covered by this service.

atching time 38

 When the "silent mode" is set, adjusting "Notification volume" of "Sound & notification" or raising the volume by pressing

Setting Airplane mode

2 [] of "Airplane mode"

Entering characters

■ Switching keyboards

appears in the status bar.

Use software keyboard to enter characters.

function) are turned off.

of video or music alarm, etc. are not muted

When airplane mode is set, all wireless functions (packet

communication, Wi-Fi® function, Bluetooth® function, NFC

To display the software keyboard, tap a character input box

With "Xperia[™] keyboard (International keyboard)", you can

use QWERTY keyboard to enter characters, Numeric keypad

to enter numbers and symbols, and Symbol keypad for more

For Symbol keypad, tap " " on the Numeric keypad.

on the character entry screen for adding contacts, creating a

the volume up key cancels the silent mode.

♦Information • When the "silent mode" is set, sounds for shutter, playback